

**PHILIPS**

Automotive lighting

Catalog  
2022



# Table of content



## Introduction

4

### Safety you can see

## Halogen

6

### 12V Car lighting

RacingVision GT200	10
X-tremeVision Pro150	11
VisionPlus	12
WhiteVision ultra	13
LongLife EcoVision	14
Vision	15
Which lamp for which function?	16

## Halogen

34

### Two-wheeler lighting

X-tremeVision moto	37
CityVision moto	37
CrystalVision ultra moto	38
Vision moto	38
Which lamp for which function?	39

## Halogen

42

### 24V Bus and truck lighting

MasterDuty	45
MasterLife	46
MasterDuty BlueVision	46
Which lamp for which function?	47

## Halogen

54

### Kits

12V spare kits	56
24V spare kits	58
Headlight restoration kit	59

## Xenon

60

### For cars and trucks

Xenon X-tremeVision gen2	63
Xenon WhiteVision gen2	64
Xenon LongerLife	65
Xenon Vision	66

## LED

72

### For cars and trucks

Ultinon Pro9000	76
Ultinon Pro5000	78
Ultinon Essential	79
Ultinon Pro6000 SL	80
Ultinon Pro3000 SL	82
CANbus	84
Light Repair	84
Which LED lighting for which function?	86

## Annexes

96

Glossary	100
Specimen packaging	102
Understanding Philips ordering codes	103
Technical illustrations: bases	104
Product index	105



# Safety you can see!

Our advanced light engine technology has been on the forefront of automotive lighting for more than 100 years.

As a **leading supplier** of lamps and lighting products to the automotive industry and aftermarket, we combine technical innovations with a genuine concern for **safety** and driving comfort.

Our automotive lighting is today the choice of many consumers and major automobile manufacturers.

Our mission is to introduce **innovative products** that constantly improve road safety and increase workshop productivity.

Our products are designed to perform efficiently and durably for continuous **customer satisfaction**. Many garages and workshops already appreciate our new range of professional LED work lights for their outstanding light output and robustness.

High-quality lighting really does make a difference.

**That's safety you can see!**



## Original equipment quality

We are committed to producing **best-in-class products** and services in the Original Equipment Manufacturer (OEM) market and automotive aftermarket. Our products are manufactured from **high-quality materials** and tested

to the highest specifications to maximize **safety** and driving **comfort** of our customers.

- We are the **choice** of major car manufacturers

- Our lighting equips **one in two cars** in Europe and one in three in the world

- Manufacturing processes that **exceed** current industry **specifications**

## Philips anti-UV-quartz glass for optimal lighting performance

**All Philips quartz-glass lamps also offer a UV shield to protect your modern plastic optics from harmful UV rays.**

- **More powerful light**

Quartz glass high resistance allows for increased pressure inside the lamp and thus generates more powerful light.

- **Better resistance**

Philips quartz glass lamps (filament at 2 800°C and glass up to 800°C) are capable of withstanding severe thermal shocks.

- **Optimal protection against ultraviolet rays**

All Philips quartz-glass lamps also offer a UV shield to protect your modern plastic optics from harmful UV rays.

# Halogen



# 12V Car lighting



# Which car lamp do you need?

## Enhanced brightness





Up to **200%** more brightness\*

**RacingVision GT200**

Beam up to **+80 m**\*\*



Beam performance\*




Available in H4, H7



Up to **150%** more brightness\*

**X-tremeVision Pro150**

Beam up to **+70 m**\*\*

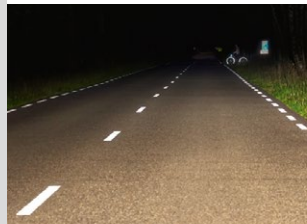

Beam performance\*





Available in H1, H4, H7, H11, HB3, HB4, HIR2

Up to **60%** more vision\*

**VisionPlus**




Beam performance\*






Available in H1, H4, H7

Up to **30%** more vision\*

**Vision**

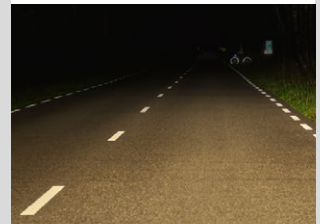

Beam performance\*



Available in H1, H3, H4, H7, H11, HB3, HB4

Images for illustration purposes only. \* Compared to the minimum legal standard. \*\* Lifetime and color temperature differ per type, indication for H7 only.





## Unique style




**Sharp white look**

**WhiteVision ultra**


H4, H7  
up to  
**4200 K**



### Beam performance\*



### Light color\*\*



### Lifetime\*\*



Available in


**H1, H3, H4, H7, H8, H11, HB3, HB4, HIR2, PSX24W**

## Extended lifetime




Lifetime up to  
**1500 hours\*\***


**LongLife EcoVision**

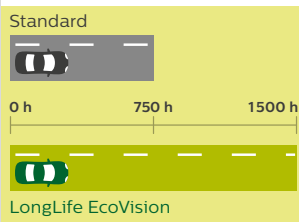


### Beam performance



### Light color\*\*



### Lifetime\*\*



Available in

**H1, H3, H4, H7, H11, H18, H19, HIR2**

\*\*\* Compared to derived minimum after ECE regulation, based on 1 Lux. Farthest distance from the car, applies to H4 and H7.

Philips RacingVision GT200 and X-tremeVision Pro150 ranges are not available in all countries. For more information, please contact your Philips representative.



# RacingVision GT200

## Incredible performance in a road-legal bulb

- Up to 200% brighter light\* to transform your drive
- Extends your beam by 80 meters\*\*
- Fully road-legal for an enjoyable drive

If you're passionate about driving, let Philips RacingVision GT200 car bulbs elevate your automotive experience. Up to 200% brighter light that shines over 80 meters longer means better vision and faster reactions for a more exciting drive.

\*Compared to minimum legal standard.

\*\*Compared to derived minimum after ECE regulation, based on 1 Lux. Farthest distance from the car.



Standard



RacingVision GT200

Available in S2 and B1 packaging



Available in



H4



H7



# X-tremeVision Pro150

## The best blend of high performance and lifetime

- See the road better with up to 150% brighter light\*
- Longer lasting for a lifetime of safety\*\*
- High-performance beam throws light 70 meters further\*\*\*
- More contrast and visibility with cool light

Combining striking brightness with the kind of lifespan previously unavailable in such a high-performance bulb, Philips X-tremeVision Pro150 provides the visibility to keep you and your loved ones even safer on the road.

\*Compared to minimum legal standard. Applies to headlight bulbs.  
 \*\*Lifetime differs per type. Indication for H7: up to 450 hours.  
 \*\*\*Compared to derived minimum after ECE regulation, based on 1 Lux.  
 Farthest distance from the car. Applies to H4, H7.



12V Car lighting



Standard



X-tremeVision Pro150

Available in S2 and B1 packaging



Available in



Halogen



# VisionPlus

## Fast reactions save lives

- **Up to 60% more vision\***
- **Greater driving comfort with enhanced visibility**
- **High-quality and ultra-resistant car lamp**

Philips VisionPlus headlamps allow drivers to see farther for greater **safety** and **comfort**.

\*Compared to the minimum legal standard



Standard



VisionPlus

Available in S2 and B1 packaging



Available in



H1



H4



H7



# WhiteVision ultra

## Sharp white look

- Superior white stylish look with up to 4 200 Kelvin\*
- Driving comfort with up to 60% more vision\*\*
- 100% road-legal performance

Philips WhiteVision ultra, featuring the latest gradient ultra-white coating formula, delivers a stunning white light of up to 4 200 Kelvin. These are the whitest road-legal halogen lights in our portfolio and the perfect choice if you're looking for a cool, stylish look and a safer drive.

\*Applies to H4, H7. Light temperature differs per technical type.  
 \*\*Compared to the minimum legal standard. Applies to headlight bulbs.



Standard

WhiteVision ultra



Available in S2, B1 and B2 packaging



Available in





# LongLife EcoVision

## Longer Lifetime, less replacement

- Lasts significantly longer\*
- High-quality and ultra-resistant car lamp

Tired of **changing** your headlamps all the time? With **longer lifetime**, Philips LongLife EcoVision is the choice for drivers seeking to **minimize maintenance** on their vehicles.


\*Lifetime differs per type. Indication for H7: up to 1500 hours.



Available in S2, C1 and B1 packaging



Available in

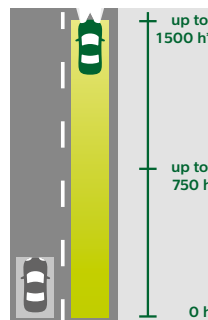



# Vision

## Feel safe, drive safe

- **Up to 30% more vision\***
- **Competitive price-performance ratio**
- **High-quality and ultra-resistant car lamp**

Philips Vision headlamps ensure excellent light-beam performance at a very **competitive price**.

\*Compared to the minimum legal standard



Standard



Vision



Available in C1 and B1 packaging



Available in



# Which lamp for which **function**?




## Low beam – high beam



## Front indicators

## Daytime Running Lights

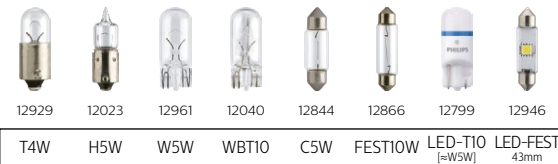


## Interior lights

## Dashboard lights



## Front parking lights

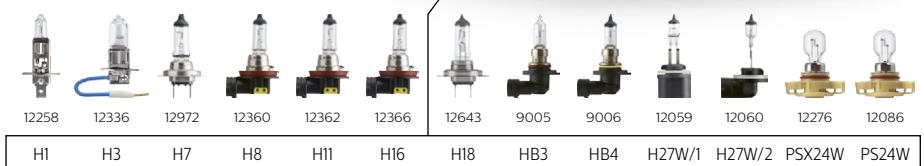

## Side indicators

## Front fog lights







philips.com/mylamps



**Trunk lights**



**3<sup>rd</sup> stop light**

**Rear indicators**




**Reversing light**



**Glove compartment lights**



**Rear parking lights**

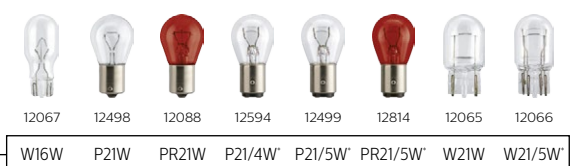

**License plate lights**



**Rear fog lights**



**Stop lights**

\*Combines stop and rear parking light function

# Headlighting

## H1 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12258PRB1	12	55	P14,5s	47516930	8 711500 475169	-	8711500475176	ECE	10
12258PRC1	12	55	P14,5s	47518360	8 711500 475183	8727900363791	8711500475190	ECE	100

## H1 VisionPlus



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12258VPS2	12	55	P14,5s	36322728	8 727900 363227	-	8727900363210	ECE	5
12258VPB1	12	55	P14,5s	36320330	8 727900 363203	-	8727900363197	ECE	10

## H1 X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12258XVPS2	12	55	P14,5s	00565628	8 719018 005656	-	8719018005663	ECE	5
12258XVPB1	12	55	P14,5s	00549630	8 719018 005496	-	8719018005502	ECE	10

## H1 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12258LLECOS2	12	55	P14,5s	36255828	8 727900 362558	-	8727900362565	ECE	5
12258LLECOB1	12	55	P14,5s	36196430	8 727900 361964	-	8727900361971	ECE	10
12258LLECO1	12	55	P14,5s	36187230	8 727900 361872	-	8727900370683	ECE	10

## H1 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12258WUJSM	12	55	P14,5s	00525028	8 719018 005250	-	8719018005267	ECE	5
12258WUB1	12	55	P14,5s	00523630	8 719018 005236	-	8719018005243	ECE	10

## H1 Spot



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12258SPC1	12	55	P14,5s	40460230	8 711500 404602	-	8727900370690	ECE	10

## H2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12311C1	12	55	X511	47752130	8 711500 477521	-	8727900370782	ECE	10

## H3 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12336PRB1	12	55	PK22s	69561130	8 711500 695611	-	8711500695628	ECE	10
12336PRC1	12	55	PK22s	69534560	8 711500 695345	8711500775696	8711500695352	ECE	100

Packing quantity: number of packs per outer box

### H3 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12336LLECO1	12	55	PK22s	77704130	8 711500 777041	-	8711500779366	ECE	10

### H3 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12336WVUB1	12	55	PK22s	00531128	8 719018 005311	-	8719018005328	ECE	5

### H4 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342PRB1	12	60/55	P43t-38	47480330	8 711500 474803	-	8711500474810	ECE	10
12342PRC1	12	60/55	P43t-38	49099560	8 711500 490995	8711500827807	8711500490988	ECE	100
12342PRC2	12	60/55	P43t-38	78028760	8 711500 780287	8711500780294	8711500780300	ECE	50

### H4 VisionPlus



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342VPS2	12	60/55	P43t-38	39925728	8 727900 399257	-	8727900350937	ECE	5
12342VPB1	12	60/55	P43t-38	39934930	8 727900 399349	-	8727900399332	ECE	10
12342VPC2	12	60/55	P43t-38	37435360	8 727900 374353	8727900374360	8727900374377	ECE	50

### H4 X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342XVPS2	12	60/55	P43t-38	00567028	8 719018 005670	-	8719018005687	ECE	5
12342XVPB1	12	60/55	P43t-38	00553330	8 719018 005533	-	8719018005540	ECE	10

### H4 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342LLECOS2	12	60/55	P43t-38	36257228	8 727900 362572	-	8727900362589	ECE	5
12342LLECOB1	12	60/55	P43t-38	36198830	8 727900 361988	-	8727900361995	ECE	10
12342LLECO1	12	60/55	P43t-38	36189630	8 727900 361896	-	8727900370836	ECE	10

### H4 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342WVUSM	12	60/55	P43t-38	35490428	8 727900 354904	-	8727900354911	ECE	5
12342WVUB1	12	60/55	P43t-38	35489830	8 727900 354898	-	8727900354881	ECE	10

### H4 RacingVision GT200



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342RGTS2	12	60/55	P43t-38	00575528	8 719018 005755	-	8719018005762	ECE	5
12342RGTB1	12	60/55	P43t-38	00571730	8 719018 005717	-	8719018005724	ECE	10

## H7 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972PRB1	12	55	PX26d	40607130	8 711500 406071	-	8711500406088	ECE	10
12972PRC1	12	55	PX26d	40593760	8 711500 405937	8711500827838	8711500405944	ECE	100
12972PRC2	12	55	PX26d	37432260	8 727900 374322	8727900374339	8727900374346	ECE	50

## H7 VisionPlus



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972VPS2	12	55	PX26d	39938728	8 727900 399387	-	8727900399370	ECE	5
12972VPB1	12	55	PX26d	39936330	8 727900 399363	-	8727900399356	ECE	10
12972VPC2	12	55	PX26d	37426160	8 727900 374261	8727900374278	8727900374285	ECE	50

## H7 X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972XVPS2	12	55	PX26d	00569428	8 719018 005694	-	8719018005700	ECE	5
12972XVPB1	12	55	PX26d	00555730	8 719018 005557	-	8719018005564	ECE	10

## H7 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972LLECOS2	12	55	PX26d	36259628	8 727900 362596	-	8727900362602	ECE	5
12972LLECOB1	12	55	PX26d	36200830	8 727900 362008	-	8727900362015	ECE	10
12972LLECO1	12	55	PX26d	36192630	8 727900 361926	-	8727900371024	ECE	10

## H7 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972WVUSM	12	55	PX26d	35495928	8 727900 354959	-	8727900354942	ECE	5
12972WVUB1	12	55	PX26d	35493530	8 727900 354935	-	8727900354928	ECE	10

## H7 RacingVision GT200



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972RGTS2	12	55	PX26d	00577928	8 719018 005779	-	8719018005786	ECE	5
12972RGTB1	12	55	PX26d	00573130	8 719018 005731	-	8719018005748	ECE	10

## H8 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12360WVUB1	12	35	PGJ19-1	00533528	8 719018 005335	-	8719018005342	ECE	5

## H8



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12360B1	12	35	PGJ19-1	82416530	8 711500 824165	-	8727900362909	ECE	10
12360C1	12	35	PGJ19-1	47582430	8 711500 475824	-	8727900371017	ECE	10

## H9



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12361B1	12	65	PGJ19-5	36308130	8 727900 363081	-	8727900363098	ECE	10
12361C1	12	65	PGJ19-5	47584830	8 711500 475848	-	8727900371000	ECE	10

## H10



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9145C1	12	45	PY20d	52974530	8 711559 529745	-	8727900370737	ECE	10

## H11 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12362PRB1	12	55	PGJ19-2	36428630	8 727900 364286	-	8727900364293	ECE	10
12362PRC1	12	55	PGJ19-2	36430930	8 727900 364309	-	8727900370751	ECE	10

## H11 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12362LLECOB1	12	55	PGJ19-2	36310430	8 727900 363104	-	8727900363111	ECE	10
12362LLECO1	12	55	PGJ19-2	36194030	8 727900 361940	-	8727900370744	ECE	10

## H11 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12362WUB1	12	55	PGJ19-2	00535928	8 719018 005359	-	8719018005366	ECE	5

## H11 X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12362XVPB1	12	55	PGJ19-2	00551928	8 719018 005519	-	8719018005526	ECE	5

## H13



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9008C1	12	60/55	P26,4t	87798730	8 711500 877987	-	8727900370768	ECE	10

## H15



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12580B1	12	55/15	PGJ23t-1	02001730	8 719018 020017	-	8719018020031	ECE	10
12580C1	12	55/15	PGJ23t-1	02000030	8 719018 020000	-	8719018020024	ECE	10

## H16



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12366C1	12	19	PGJ19-3	36856730	8 727900 368567	-	8727900370775	ECE	10

## H18 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12643LLC1	12	65	PY26d-1	35603830	8 727900 356038	-	8727900356045	ECE	10

## H19 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12644LLC1	12	60/65	PU43t-3	35605230	8 727900 356052	-	8727900356069	ECE	10

## HB1 9004



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9004C1	12	65/45	P29t	47074430	8 711500 470744	-	8727900370997	-	10

## HB3 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9005PRB1	12	60	P20d	24724730	8 711500 247247	-	8711500247254	ECE	10
9005PRC1	12	60	P20d	24689930	8 711500 246899	-	8727900370980	ECE	10

## HB3 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9005WWUB1	12	60	P20d	00537328	8 719018 005373	-	8719018005380	ECE	5

## HB3 X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9005XVPB1	12	60	P20d	00557128	8 719018 005571	-	8719018005588	ECE	5

## HB4 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9006PRB1	12	51	P22d	24726130	8 711500 247261	-	8711500247278	ECE	10
9006PRC1	12	51	P22d	24687530	8 711500 246875	-	8727900370973	ECE	10

## HB4 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9006WWUB1	12	55	P22d	00539728	8 719018 005397	-	8719018005403	ECE	5

## HB4 X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9006XVPB1	12	51	P22d	00559528	8 719018 005595	-	8719018005601	ECE	5

## HB5 9007



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9007C1	12	65/55	PX29t	24550230	8 711500 245502	-	8727900370966	-	10

## HIR2 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9012LLC1	12	55	PX22d	35125530	8 727900 351255	-	8727900370935	ECE	10

## HIR2 WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9012WWUB1	12	55	PX22d	00541028	8 719018 005410	-	8719018005427	ECE	5

## HIR2 X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
9012XVPB1	12	55	PX22d	00561828	8 719018 005618	-	8719018005625	ECE	5

## H27W/1



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12059C1	12	27	PG13	52854030	8 711559 528540	-	8727900370799	ECE	10

## H27W/2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12060C1	12	27	PGJ13	52857130	8 711559 528571	-	8727900370805	ECE	10

## R2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12620B1	12	45/40	P45t-41	5543930	8 711500 055439	-	8711559525327	ECE	10
12620C1	12	45/40	P45t-41	40085730	8 711500 400857	-	8711500779359	ECE	10

## R2 Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12475B1	12	45/40	P45t-41	24716230	8 711500 247162	-	8711500247179	ECE	10
12475C1	12	45/40	P45t-41	40466430	8 711500 404664	-	8727900371130	ECE	10

## Signaling and interior lighting

### P21W VisionPlus



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12498VPB2	12	21	BA15s	36318030	8 727900 363180	-	8727900363173	ECE	10

### P21W LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12498LLECOB2	12	21	BA15s	38210530	8 727900 382105	-	8727900382112	ECE	10
12498LLECOCP	12	21	BA15s	38198628	8 727900 381986	8727900381993	8727900391695	ECE	5x10

### P21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12498B2	12	21	BA15s	05549130	8 711500 055491	-	8711559520131	ECE	10
12498CP	12	21	BA15s	49078073	8 711500 490780	8711500490797	8711500490803	ECE	20x10

## P21/4W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12594B2	12	21/4	BAZ15d	40485530	8 711500 404855	-	8711500471017	ECE	10
12594CP	12	21/4	BAZ15d	48433828	8 711500 484338	8711500484345	8727900391565	ECE	5x10

## P21/5W VisionPlus



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12499VPB2	12	21/5	BAY15d	36316630	8 727900 363166	-	8727900363159	ECE	10

## P21/5W LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12499LLECOB2	12	21/5	BAY15d	38212930	8 727900 382129	-	8727900382136	ECE	10
12499LLECOCP	12	21/5	BAY15d	38201328	8 727900 382013	8727900382020	8727900391053	ECE	5x10

## P21/5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12499B2	12	21/5	BAY15d	05545330	8 711500 055453	-	8711559520148	ECE	10
12499CP	12	21/5	BAY15d	48159773	8 711500 481597	8711500481603	8711500481610	ECE	20x10

## PR21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12088CP	12	21	BAW15s	48531128	8 711500 485311	8711500485328	8727900391589	ECE	5x10

## PR21/5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12495CP	12	21/5	BAW15d	48873228	8 711500 488732	8711500488749	8727900391572	ECE	5x10

## PY21W SilverVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12496SVB2	12	21	BAU15s	31117730	8 711500 311177	-	8711500311191	ECE	10

## PY21W LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12496LLECOCP	12	21	BAU15s	38218128	8 727900 382181	8727900382198	8727900391084	ECE	5x10

## PY21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12496NAB2	12	21	BAU15s	52372930	8 711559 523729	-	8711559523743	ECE	10
12496NACP	12	21	BAU15s	52534173	8 711559 525341	8711559525358	8711559525365	ECE	20x10

## Stop P22



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12401CP	12	15	BA15s	87821228	8 711500 878212	8711500878229	8711500790538	-	5x10



## Stop P25



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12445CP	12	18	BA15s	48440628	8 711500 484406	8711500484413	8727900391602	-	5x10

## R5W LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12821LLECOB2	12	5	BA15s	38208230	8 727900 382082	-	8727900382099	ECE	10
12821LLECOCP	12	5	BA15s	38195528	8 727900 381955	8727900381962	8727900390940	ECE	5x10

## R5W BA15s



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12821B2	12	5	BA15s	5546030	8 711500 055460	-	8711500417701	ECE	10
12821CP	12	5	BA15s	48269373	8 711500 482693	8711500482709	8711500482716	ECE	20x10

## R5W BA15d



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12822CP	12	5	BA15d	45407228	8 711500 454072	8711500454959	8711500790521	ECE	5x10

## R10W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12814B2	12	10	BA15s	5547730	8 711500 055477	-	8711500417718	ECE	10
12814CP	12	10	BA15s	48341673	8 711500 483416	8711500483423	8711500483430	ECE	20x10

## RY10W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12093NACP	12	10	BAU15s	48362128	8 711500 483621	8711500483638	8727900391619	ECE	5x10

## BA7



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12829CP	12	2	BA7s	52123728	8 711559 521237	8711500401236	8727900390933	-	5x10

## T2W - T3W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12913CP	12	2	BA9s	21997828	8 711500 219978	8711500219985	8711500220820	-	5x10
12910CP	12	3	BA9s	21949728	8 711500 219497	8711500219503	8711500220837	-	5x10

## T4W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12929B2	12	4	BA9s	5550730	8 711500 055507	-	8711559520094	ECE	10
12929CP	12	4	BA9s	21979473	8 711500 219794	8711500219800	8711500219817	ECE	20x10

## Miniature halogen signaling USA

### H5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12023CP	12	5	BA9s	51270928	8 711559 512709	8711559512464	8727900371222	-	5x10

### H6W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12036B2	12	6	BAX9s	24720930	8 711500 247209	-	8711500247216	ECE	10
12036CP	12	6	BAX9s	87603428	8 711500 876034	8711500876041	8727900370676	ECE	5x10

### H6W WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12036WVUB2	12	6	BAX9s	00543430	8 719018 005434	-	8719018005441	ECE	10

### H10W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12024CP	12	10	BA9s	52941728	8 711559 529417	8711559529424	8727900371192	-	5x10

### H20W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12025CP	12	20	BA9s	87600328	8 711500 876003	8711500876010	8727900371154	-	5x10

### H21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12356CP	12	21	BAY9s	87989928	8 711500 879899	8711500879905	8727900371116	ECE	5x10

### HY21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12146CP	12	21	BAW9s	35244328	8 727900 352443	8727900352450	8727900370867	ECE	5x10

## Wedge base

### W1,2W - W2,3W - W2W - WBT5



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12521CP	12	1	W2x4,6d	48321828	8 711500 483218	8711500483225	8727900391671	-	5x10
12516B2	12	1.2	W2x4,6d	5554530	8 711500 055545	-	8711500417763	-	10
12516CP	12	1.2	W2x4,6d	48153573	8 711500 481535	8711500481542	8711500481559	-	200
12505CP	12	2	W2x4,6d	48327028	8 711500 483270	8711500483287	8727900391657	-	5x10
12061CP	12	2.3	W2x4,6d	48330028	8 711500 483300	8711500483317	8727900391640	ECE	5x10

### W2,2W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12960CP	12	2.2	W2,1x9,5d	48150428	8 711500 481504	8711500481511	8727900391633	-	5x10

### W3W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12256B2	12	3	W2,1x9,5d	52410830	8 711559 524108	-	8711559524122	ECE	10
12256CP	12	3	W2,1x9,5d	48144328	8 711500 481443	8711500481450	8727900391664	ECE	5x10

### W5W LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12961LLECOB2	12	5	W2,1x9,5d	38204430	8 727900 382044	-	8727900382051	ECE	10
12961LLECOCP	12	5	W2,1x9,5d	38189428	8 727900 381894	8727900381900	8727900390872	ECE	5x10

### W5W X-tremeVision Pro150



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12961XVPB2	12	5	W2,1x9,5d	00563230	8 719018 005632	-	8719018005649	ECE	10

### W5W WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12961WUJB2	12	5	W2,1x9,5d	35484330	8 727900 354843	-	8727900354874	ECE	10

### W5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12961B2	12	5	W2,1x9,5d	40421330	8 711500 404213	-	8711559520070	ECE	10
12961CP	12	5	W2,1x9,5d	49090273	8 711500 490902	8711500490919	8711500490926	ECE	20x10

### WY5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12396NAB2	12	5	W2,1x9,5d	40058130	8 711500 400581	-	8711500400598	ECE	10
12396NACP	12	5	W2,1x9,5d	53002428	8 711559 530024	8711559530031	8727900390889	ECE	5x10

## WBT10 VisionPlus



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12040VPB2	12	6	W2,1x9,5d	52416030	8 711559 524160	-	8711559524184	-	10

## W16W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12067B2	12	16	W2,1x9,5d	40587630	8 711500 405876	-	8711559521053	ECE	10
12067CP	12	16	W2,1x9,5d	48272328	8 711500 482723	8711500482730	8727900391626	ECE	5x10

## W21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12065B2	12	21	W3x16d	70146330	8 727900 701463	-	8727900701470	ECE	10
12065CP	12	21	W3x16d	47135228	8 711500 471352	8711500471369	8727900391107	ECE	5x10

## W21/5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12066B2	12	21/5	W3x16q	69739130	8 727900 697391	-	8727900697407	ECE	10
12066CP	12	21/5	W3x16q	47138328	8 711500 471383	8711500471390	8727900391091	ECE	5x10

## WY21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12071B2	12	21	WX3x16d	69741430	8 727900 697414	-	8727900697421	ECE	10
12071CP	12	21	WX3x16d	52539628	8 711559 525396	8711559525402	8727900391688	ECE	5x10

# Festoon

## Festoon T6,2x27



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12818CP	12	3	SV6	48461128	8 711500 484611	8711500484628	8727900695632	-	5x10

## Festoon T6,2x35



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12848CP	12	3	SV6	48467328	8 711500 484673	8711500484680	8727900391558	-	5x10

## C5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12844B2	12	5	SV8,5	5551430	8 711500 055514	-	8711500417749	ECE	10
12844CP	12	5	SV8,5	48156673	8 711500 481566	8711500481573	8711500481580	ECE	20x10

## Festoon T10,5x30 LongLife EcoVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12860LLECOCP	12	10	SV8,5	38192428	8 727900 381924	8727900381931	8727900391114	-	5x10

## Festoon T10,5x38



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12854CP	12	10	SV8,5	48248828	8 711500 482488	8711500482495	8727900391510	-	5x10

## Festoon T10,5x43



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12864CP	12	5	SV8,5	48205128	8 711500 482051	8711500482075	8727900391527	-	5x10
12866B2	12	10	SV8,5	5552130	8 711500 055521	-	8711500417756	-	10
12866CP	12	10	SV8,5	48242628	8 711500 482426	8711500482433	8727900391534	-	5x10

## Festoon T15x43



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12850CP	12	15	SV8,5	48285328	8 711500 482853	8711500482860	8727900391541	-	5x10

## Bax

### Bax 8,3s/1,35 black



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12597B2	12	1.2	B8,3s/1,35	53018530	8 711559 530185	-	8711559530192	-	10
12597CP	12	1.2	B8,3s/1,35	48365228	8 711500 483652	8711500483669	8727900390957	-	5x10

### Bax 8,3s/1,5 blue



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12602CP	12	2	B8,3s/1,5	48396628	8 711500 483966	8711500483973	8727900390995	-	5x10

### Bax 8,5d/2 black



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12598B2	12	1.2	B8,5d/2	40588330	8 711500 405883	-	8711500405890	-	10
12598CP	12	1.2	B8,5d/2	48387428	8 711500 483874	8711500483881	8727900390964	-	5x10

### Bax 8,5d/1,5 blue



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12603CP	12	1.2	B8,5d/1,5	48399728	8 711500 483997	8711500484000	8727900391015	-	5x10

### Bax 8,5d/2 green



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12600CP	12	2	B8,5d/2	48393528	8 711500 483935	8711500483942	8727900390971	-	5x10

### Bax 8,5d green



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12604CP	12	2	B8,5d	40508128	8 711500 405081	8711500404589	8727900391022	-	5x10

### Bax 8,5d beige



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12637CP	12	1.5	B8,5d	51487128	8 711559 514871	8711500400178	8727900371048	-	5x10

### Bax 10d black halogen



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12615CP	12	5	B10d	52807628	8 711559 528076	8711500243768	8727900370911	-	5x10

### Bax 10d brown halogen



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12614CP	12	3	B10d	52805228	8 711559 528052	8711559512723	8727900370928	-	5x10

### Bax 8,4d light blue



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12623CP	12	1.2	BX8,4d	51384328	8 711559 513843	8711500244154	8727900370904	-	5x10

## Bax 8,4d beige



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12627CP	12	1.5	BX8,4d	51414728	8 711559 514147	8711500247414	8727900370959	-	5x10
12629CP	12	1.8	BX8,4d	51488828	8 711559 514888	8711559512488	8727900371031	-	5x10

## Bax 8,4d black



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12625CP	12	1.2	BX8,4d	51409328	8 711559 514093	8711500244420	8727900371208	-	5x10

## Bax 8,4d light green



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12626CP	12	2	BX8,4d	51412328	8 711559 514123	8711500246066	8727900370942	-	5x10

## Bax 8,4d olive green



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12611CP	12	1.3	BX8,4d	77432328	8 711500 774323	8711500774330	8711500779397	-	5x10

## Bax 8,4d orange



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12624CP	12	1.1	BX8,4d	51411628	8 711559 514116	8711500245137	8727900370898	-	5x10

## Bax 8,5d white



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12638CP	12	1.12	BX8,5d	48846628	8 711500 488466	8711500488473	8727900391503	-	5x10

## HiPerVision

### P13W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12277C1	12	13	PG18,5d-1	69672130	8 727900 696721	-	8727900391008	ECE	10



### PCY16W HiPerClick



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12271AC1	12	16	PU20d/2	38965430	8 727900 389654	-	8727900391152	ECE	10



### PW16W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12177C1	12	16	WP3,3x14,5/8	39623230	8 727900 396232	-	8727900396249	ECE	10



### PS19W LongLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12085LLC1	12	19	PG20/1	70046630	8 727900 700466	-	8727900390926	ECE	10



### PS19W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12085C1	12	19	PG20/1	69653030	8 727900 696530	-	8727900390988	ECE	10



### PSY19W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12275NAC1	12	19	PG20/2	52735230	8 711559 527352	-	8727900390858	ECE	10



### HiPerVision LCP



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12197HTRC1	13.5	24	HPSL 2A	39621830	8 727900 396218	-	8727900396225	-	10



### PS24W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12086FFC1	12	24	PG20/3	70044230	8 727900 700442	-	8727900390919	ECE	10



### PSX24W WhiteVision ultra



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12276WWUB1	12	24	PG20/7	00545828	8 719018 005458	-	8719018005465	ECE	5



### PSX24W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12276C1	12	24	PG20/7	69676930	8 727900 696769	-	8727900390902	ECE	10





## PSY24W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12188NAC1	12	24	PG20/4	69668430	8 727900 696684	-	8727900390834	ECE	10

## PSY24W SilverVision+



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12180SV+C1	12	24	PG20/4	70379530	8 727900 703795	-	8727900390841	ECE	10

## PW24W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12182HTRC1	12	24	WP3,3x14,5/3	39196130	8 727900 391961	-	8727900397369	ECE	10

## PWY24W SilverVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12174SVHTRC1	12	24	WP3,3x14,5/4	39200530	8 727900 392005	-	8727900397352	ECE	10

## PWY24W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12174NAHTRC1	12	24	WP3,3x14,5/4	39202930	8 727900 392029	-	8727900397345	ECE	10

## PY24W SilverVision+



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12274SV+C1	12	24	PGU20/4	69678330	8 727900 696783	-	8727900390780	ECE	10

## PY24W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12190NAC1	12	24	PGU20/4	69690530	8 727900 696905	-	8727900390803	ECE	10

## PSX26W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12278C1	12	26	PG18,5d/3	38874930	8 727900 388749	-	8727900390896	ECE	10

# Halogen



# Two-wheeler lighting



# Which **two-wheeler lamp** do you need?



## Enhanced brightness



## Unique style




Up to **130%** more brightness\*

**X-tremeVision moto**



Beam performance\*




Available in H4, H7

See and **be seen**

**CityVision moto**




Beam performance




Available in H4, H7, HS1

Up to **30%** more vision\*

**Vision moto**

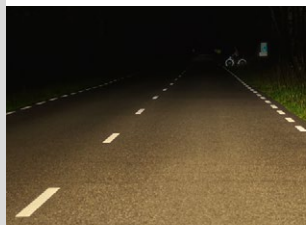


Beam performance





Available in H4, H7, HS1

**Bright white** light

**CrystalVision ultra moto**

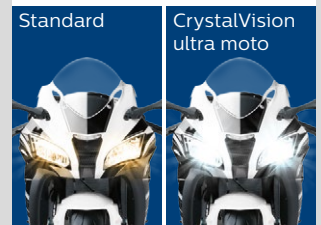

Beam performance



Available in H4, H7, HS1



Philips two-wheeler lighting is designed to resist extreme vibration – up to 10 G.

Images for illustration purposes only.

\* Compared to the minimum legal requirement.

\*\* Lifetime differs per type, indication for H7 only.

[philips.co.uk/c-m-li/motorcycle-lights](http://philips.co.uk/c-m-li/motorcycle-lights)

# X-tremeVision moto

Up to **130%**  
more vision\*

- **Maximum brightness**
- **Unique gas filling for optimal lifetime and durability**
- **Significantly longer beam\***
- **Maximum comfort and safety**

Philips X-tremeVision moto offers up to **130% more vision\*** for riders who need to see farther for **ultimate performance** and **safety**.

\*Compared to the minimum legal standard



Standard



X-tremeVision moto

Available in



H4



H7


# CityVision moto

See and be seen


- **Distinctive orange effect**
- **Maximum safety**
- **Specifically designed for city use**
- **Up to 40% more vision\***

For maximum safety and visibility, Philips CityVision moto produces a distinctive, attention-grabbing **orange effect**. Motorcycle riders everywhere are looking for more safety, especially riders in heavy city traffic.

\*Compared to the minimum legal standard

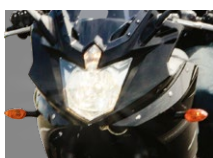

Standard

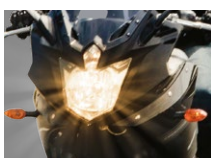

CityVision moto

Available in



H4



H7



HS1

Images for illustration purposes only **37**

# CrystalVision ultra moto

## Bright white light

- **White modern look**
- **Customization and style on the road**
- **High quality and ultra-resistant headlamp**

For riders seeking ultimate style, Philips CrystalVision ultra moto headlamps provide them with **bright white light**. Customize your style **with no compromise on visibility and comfort**.



Standard

CrystalVision ultra moto

Available in



H4

H7

HS1

# Vision moto

Up to **30% more vision\***

- **Better performance\***
- **High-quality and ultra-resistant motorcycle lamp**

Producing **up to 30% more vision\*** than a standard lamp, Philips Vision moto allows riders to see farther with improved light-beam performance at a very **competitive price**.

\*Compared to the minimum legal standard



Standard

Vision moto

Available in



H4

H7

HS1

# Which lamp for which function?



12258 12336 12342 12972 12361 12362 12636 9005 9006 12620 12728 12008

H1 H3 H4 H7 H9 H11 HS1 HB3 HB4 R2 S2 S3



**Low beam - high beam**



12961 12067 12065 12071 12396 12356

W5W W16W W21W WY21W WY5W H21W



12821 12814 12093 12498 12496 12499

R5W R10W RY10W P21W PY21W P21/5W



**Front indicators**



12256 12961 12066 12929 12821 12814 12498 12499

W3W W5W W21/5W T4W R5W R10W P21W P21/5W



**Rear position light**



12256 12961 12929 12821 12814 12036 12844

W3W W5W T4W R5W R10W H6W C5W



**Licence plate light**



**X-tremeVision moto**



**CityVision moto**



**CrystalVision ultra moto**



**Vision moto**

[philips.co.uk/c-m-li/motorcycle-lights](http://philips.co.uk/c-m-li/motorcycle-lights)



12929 12821 12814 12036

T4W R5W R10W H6W



12256 12961 12067 12913 12910

W3W W5W W16W T2W T3W



**Front position light**



12067 12066 12498 12088 12499 12495

W16W W21/5W P21W PR21W P21/5W PR21/5W




**Stop light**



12356 12961 12067 12065 12071

W5W W16W W21W WY21W H21W



12821 12814 12093 12498 12496

R5W R10W RY10W P21W PY21W



**Rear indicators**

Two-wheeler lighting

Halogen

## H4 Vision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342PRBW	12	60/55	P43t-38	49024730	8 711500 490247	-	8711500490254	ECE	10

## H4 CityVision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342CTVBW	12	60/55	P43t-38	39896030	8 727900 398960	-	8727900398977	ECE	10

## H4 X-tremeVision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342XV+BW	12	60/55	P43t-38	00056930	8 719018 000569	-	8719018000576	ECE	10

## H4 CrystalVision ultra moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12342CVUBW	12	60/55	P43t-38	22148330	8 711500 221483	-	8711500221490	ECE	10

## H7 Vision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972PRBW	12	55	PX26d	49026130	8 711500 490261	-	8711500490278	ECE	10

## H7 CityVision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972CTVBW	12	55	PX26d	39898430	8 727900 398984	-	8727900398991	ECE	10

## H7 X-tremeVision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972XV+BW	12	55	PX26d	37867230	8 727900 378672	-	8727900378689	ECE	10

## H7 CrystalVision ultra moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12972CVUBW	12	55	PX26d	22118630	8 711500 221186	-	8711500221193	ECE	10

## HS1 Vision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12636BW	12	35/35	PX43t	53035330	8 727900 530353	-	8727900530360	ECE	10
12636C1	12	35/35	PX43t	51250130	8 711559 512501	-	8727900370881	ECE	10



## HS1 CityVision moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12636CTVBW	12	35/35	PX43t	39894630	8 727900 398946	-	8727900398953	ECE	10

## HS1 CristalVision ultra moto



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12636BVBW	12	35/35	PX43t	78195630	8 711500 781956	-	8711500781963	ECE	10

## S2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12728BW	12	35/35	BA20d	77385230	8 711500 773852	-	8711500773869	ECE	10
12728C1	12	35/35	BA20d	77359330	8 711500 773593	-	8711500779342	ECE	10

## S3



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12008BW	12	15	P26s	77381430	8 711500 773814	-	8711500773845	ECE	10
12008C1	12	15	P26s	77394430	8 711500 773944	-	8711500779335	ECE	10

## Signaling lamps

### W3W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12256B2	12	3	W2,1x9,5d	52410830	8 711559 524108	-	8711559524122	ECE	10
12256CP	12	3	W2,1x9,5d	48144328	8 711500 481443	8711500481450	8727900391664	ECE	5x10

### P21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12498B2	12	21	BA15s	05549130	8 711500 055491	-	8711559520131	ECE	10
12498CP	12	21	BA15s	49078073	8 711500 490780	8711500490797	8711500490803	ECE	20x10

### P21/5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12499B2	12	21/5	BAY15d	05545330	8 711500 055453	-	8711559520148	ECE	10

# Halogen



# 24V Bus and truck lighting



# Which **24 V** lamp do you need?



Safety and **durability**



Built to **last**

**MasterDuty**




**Best-in-class** lifetime

**MasterLife**




Beam performance\*



Available in **H1, H3, H4, H7, H11**

Beam performance\*



Available in **H1, H3, H4, H7, H11**

Safety and **style**





**Maximum xenon** effect

**MasterDuty BlueVision**



Heavy duty vibration resistant

Light color



Available in **H3, H4, H7**

Images for illustration purposes only


\* Compared to the minimum legal standard, applies to H1, H4, H7 and H11

\*\* Lifetime differs per type, indication for H7 only

# Safety and durability

## Philips 24V headlighting advantage

Combining **vibration resistance** with **high quality**, Philips truck headlamps last longer than standard lamps.

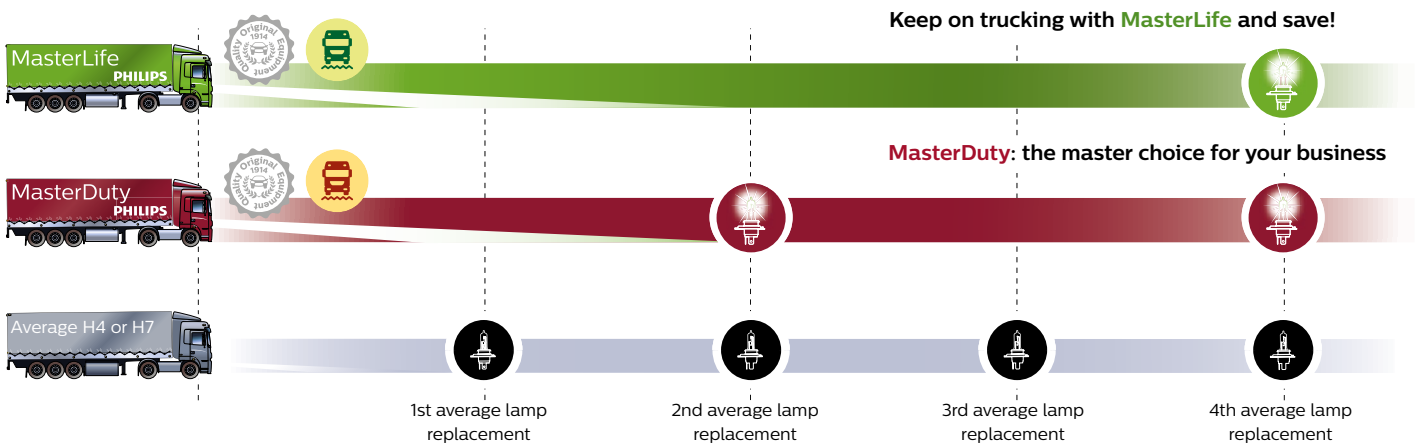

## MasterDuty

### Built to last

- Lasts up to 550 hours\*
- Maximum vibration resistance
- Up to 130% more vision\*\*
- Reinforced mount and base guards against shocks
- Extra robust double-coil filament

The Philips MasterDuty headlamps are designed for **maximum vibration resistance** and excellent **lifetime**. MasterDuty is the **right choice** for drivers seeking **toughness** that **lasts**.

\*Lifetime differs per type, indication for H7 only

\*\*Compared to the minimum legal standard, applies to H1, H4, H7 and H11.



Available in B1 and C1 packaging



Available in



# MasterLife

## Best-in-class lifetime


- Lasts up to 1200 hours\*
- Up to 100% more vision\*\*
- Maximum vibration resistance\*
- Extra-robust double-coil filament

Philips MasterLife lasts up to **1200 hours\*** while withstanding extreme **stress** and **vibration**. With a **minimum failure rate** our lamps keep your fleet productive and on the move by minimizing time-consuming interruptions.

**MasterLife is the smartest choice for large fleet owners!**

\*Lifetime differs per type, indication for H7 only.

\*\*Compared to the minimum legal standard, applies to H1, H4, H7 and H11.

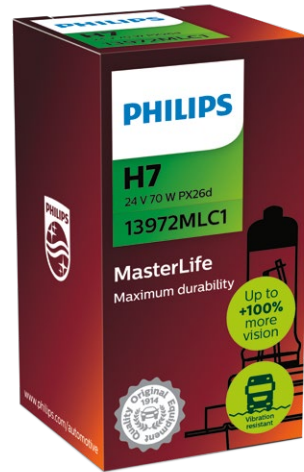

Available in C1 packaging



Available in



# MasterDuty BlueVision

## Maximum xenon effect

- Maximum vibration resistance\*
- High-performance quartz glass with xenon-effect coating
- Distinctive blue cap, looks sharp even when turned off

For drivers seeking **ultimate style** and **performance**, Philips MasterDuty BlueVision produces a **blue xenon effect**. It combines the **durability** and **vibration resistance** of Philips MasterDuty with an additional blue xenon effect for maximum style.

\*Compared to average H4 or H7 24V lamps on the market



Standard

MasterDuty BlueVision



Available in S2 and B1 packaging




Available in



# Which lamp for which function?



philips.com/trucklight

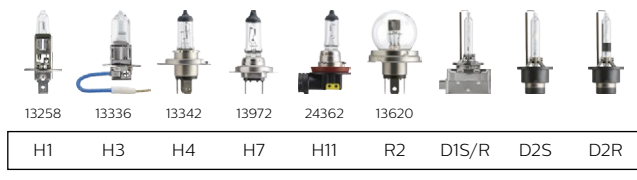

**Low beam – high beam**




**Interior lights**



**Front indicators**



**Side indicators**

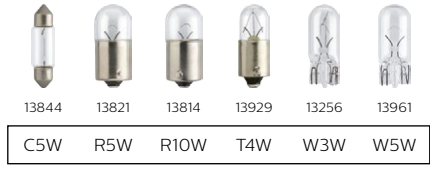


**Running lights**




**License plate lights**



**Stop lights**

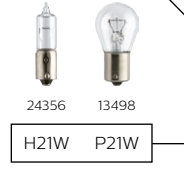


**Reversing light**

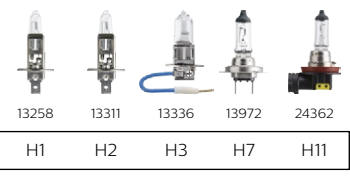

**Front fog lights**



**Dashboard lights**

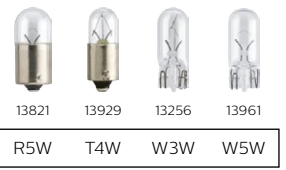

**Front position lights**




**Rear position lights**



**Rear indicators**



**Rear fog lights**

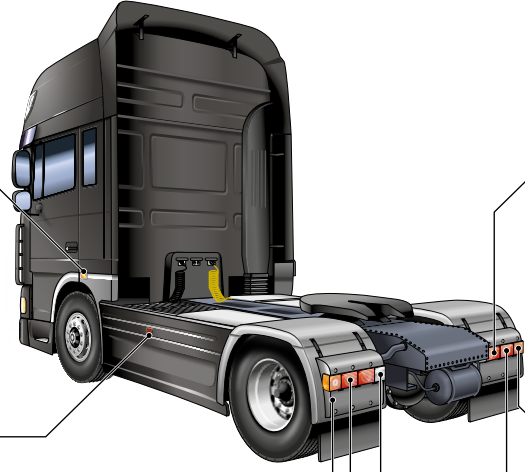

24V Bus and truck lighting

Halogen

## 24V headlighting

### H1 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13258MDB1	24	70	P14,5s	82585830	8 711500 825858	-	8711500825865	ECE	10
13258MDC1	24	70	P14,5s	82577360	8 711500 825773	8711500828507	8711500825780	ECE	100

### H1 MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13258MLC1	24	70	P14,5s	82569830	8 711500 825698	-	8727900370812	ECE	10

### H2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13311C1	24	70	X511	47751430	8 711500 477514	-	8727900371079	ECE	10

### H3 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13336MDB1	24	70	PK22s	77459030	8 711500 774590	-	8711500774613	ECE	10
13336MDC1	24	70	PK22s	77460660	8 711500 774606	8711500775313	8711500774637	ECE	100

### H3 MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13336MLC1	24	70	PK22s	77462030	8 711500 774620	-	8711500779403	ECE	10

### H3 MasterDuty BlueVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13336MDBVS2	24	70	PK22s	77486628	8 711500 774866	-	8711500774897	ECE	5
13336MDBVB1	24	70	PK22s	77488030	8 711500 774880	-	8711500774910	ECE	10

### H4 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13342MDB1	24	75/70	P43t-38	82587230	8 711500 825872	-	8711500825889	ECE	10
13342MDC1	24	75/70	P43t-38	82579760	8 711500 825797	8711500828002	8711500825803	ECE	100

### H4 MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13342MLC1	24	75/70	P43t-38	82571130	8 711500 825711	-	8727900371086	ECE	10

### H4 MasterDuty BlueVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13342MDBVS2	24	75/70	P43t-38	53275328	8 727900 532753	-	8727900532760	ECE	5
13342MDBVB1	24	75/70	P43t-38	53281430	8 727900 532814	-	8727900532821	ECE	10



## H7 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13972MDB1	24	70	PX26d	82589630	8 711500 825896	-	8711500825902	ECE	10
13972MDC1	24	70	PX26d	82581060	8 711500 825810	8711500828514	8711500825827	ECE	100

## H7 MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13972MLC1	24	70	PX26d	82573530	8 711500 825735	-	8727900371147	ECE	10

## H7 MasterDuty BlueVision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13972MDBVS2	24	70	PX26d	53277728	8 727900 532777	-	8727900532784	ECE	5
13972MDBVB1	24	70	PX26d	53279130	8 727900 532791	-	8727900532807	ECE	10

## H11 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24362MDC1	24	70	PGJ19-2	82583430	8 711500 825834	-	8727900371055	ECE	10

## H11 MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24362MLC1	24	70	PGJ19-2	82575930	8 711500 825759	-	8727900371062	ECE	10

## R2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13620C1	24	55/50	P45t-41	40087130	8 711500 400871	-	8711500779458	ECE	10

## 24V signaling and interior lighting

### P21W MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13498MDCP	24	21	BA15s	69949473	8 727900 699494	8727900699500	8727900699517	ECE	20x10

### P21W MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13498MLCP	24	21	BA15s	69961628	8 727900 699616	8727900699623	8727900391145	ECE	5x10

## P21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13498B2	24	21	BA15s	40455830	8 711500 404558	-	8711500405449	ECE	10
13498CP	24	21	BA15s	48415473	8 711500 484154	8711500484161	8711500484178	ECE	20x10

## P21/5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13499B2	24	21/5	BAY15d	40456530	8 711500 404565	-	8711500405371	ECE	10
13499CP	24	21/5	BAY15d	48424673	8 711500 484246	8711500484253	8711500484260	ECE	20x10

## PY21W MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13496MLCP	24	21	BAU15s	69964728	8 727900 699647	8727900699654	8727900391138	ECE	5x10

## Stop P22



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13401CP	24	15	BA15s	87826728	8 711500 878267	8711500878274	8711500790507	-	5x10
13402CP	24	15	BA15d	87836628	8 711500 878366	8711500878373	8711500790514	-	5x10

## Stop P25



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13445CP	24	18	BA15s	48443728	8 711500 484437	8711500484444	8727900390810	-	5x10

## R5W MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13821MDCP	24	5	BA15s	69955528	8 727900 699555	8727900699562	8727900390766	ECE	5x10

## R5W MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13821MLCP	24	5	BA15s	69970828	8 727900 699708	8727900699715	8727900390773	ECE	5x10

## R5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13821B2	24	5	BA15s	40453430	8 711500 404534	-	8711500405425	ECE	10
13821CP	24	5	BA15s	48338673	8 711500 483386	8711500483393	8711500483409	ECE	20x10
13822CP	24	5	BA15d	40904128	8 711500 409041	8711500878021	8711500790491	ECE	5x10

## R10W MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13814MDCP	24	10	BA15s	69952428	8 727900 699524	8727900699531	8727900391121	ECE	5x10

## R10W MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13814MLCP	24	10	BA15s	69967828	8 727900 699678	8727900699685	8727900390742	ECE	5x10

## R10W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13814B2	24	10	BA15s	40452730	8 711500 404527	-	8711559526409	ECE	10
13814CP	24	10	BA15s	48344773	8 711500 483447	8711500483454	8711500483461	ECE	20x10

## BA7



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13829CP	24	3	BA7s	52133628	8 711559 521336	8711500401274	8727900390759	-	5x10

## T4W MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13929MDCP	24	4	BA9s	69958628	8 727900 699586	8727900699593	8727900391039	ECE	5x10

## T4W MasterLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13929MLCP	24	4	BA9s	69976028	8 727900 699760	8727900699777	8727900391046	ECE	5x10

## T2W - T3W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13913CP	24	2	BA9s	22003528	8 711500 220035	8711500220042	8711500220844	-	5x10
13910CP	24	3	BA9s	21955828	8 711500 219558	8711500219565	8711500220851	-	5x10

## T4W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13929B2	24	4	BA9s	40454130	8 711500 404541	-	8711500405432	ECE	10
13929CP	24	4	BA9s	21985573	8 711500 219855	8711500219862	8711500219879	ECE	20x10

## Miniature halogen signaling USA

### H21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24356CP	24	21	BAY9s	87615728	8 711500 876157	8711500876164	8727900371161	ECE	5x10

## Wedge base

### W2,5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13960CP	24	2.5	W2,1x9,5d	48147428	8 711500 481474	8711500481481	8727900391275	-	5x10

### W3W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13256CP	24	3	W2,1x9,5d	48141228	8 711500 481412	8711500481429	8727900391169	ECE	5x10

### W5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13961B2	24	5	W2,1x9,5d	52420730	8 711559 524207	-	8711559524214	ECE	10
13961CP	24	5	W2,1x9,5d	48138273	8 711500 481382	8711500481399	8711559530376	ECE	20x10

### WBT5



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13521CP	24	1	W2x4,6d	48324928	8 711500 483249	8711500483256	8727900391176	-	5x10
13516CP	24	1.2	W2x4,6d	48306573	8 711500 483065	8711500483072	8711500483089	-	20x10
13974CP	24	2	W2x4,6d	48318828	8 711500 483188	8711500483195	8727900391183	-	5x10

## Festoon

### Festoon T6,2x27



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13818CP	24	3	SV6	48464228	8 711500 484642	8711500484659	8727900391251	-	5x10

### Festoon T6,2x35



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13848CP	24	3	SV6	48470328	8 711500 484703	8711500484710	8727900391268	-	5x10

### Festoon T10,5x38 10W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13854CP	24	10	SV8,5	48251828	8 711500 482518	8711500482525	8727900391206	-	5x10

### C5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13844B2	24	5	SV8,5	40463330	8 711500 404633	-	8711500405388	ECE	10
13844CP	24	5	SV8,5	48197973	8 711500 481979	8711500481986	8711500481993	ECE	20x10

## Festoon T10,5x43 5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13864CP	24	5	SV8,5	48233428	8 711500 482334	8711500482341	8727900391213	-	5x10

## Festoon T10,5x43 10W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13866CP	24	10	SV8,5	48245728	8 711500 482457	8711500482464	8727900391220	-	5x10

## Festoon T15x43 15W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13850CP	24	15	SV8,5	48288428	8 711500 482884	8711500482891	8727900391244	-	5x10

## Festoon T15x43 18W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13807CP	24	18	SV8,5	48294528	8 711500 482945	8711500482952	8727900391237	-	5x10

## Bax

### Bax 8,3s/1,35 grey



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13597CP	24	1.2	B8,3s/1,35	48384328	8 711500 483843	8711500483850	8727900390797	-	5x10

### Bax 8,5d/2 grey



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
13598CP	24	1.2	B8,5d/2	48390428	8 711500 483904	8711500483911	8727900390827	-	5x10

### Bax 8,5d brown



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24032CP	24	1.2	B8,5d	48852728	8 711500 488527	8711500488534	8727900391077	-	5x10

### Bax 8,5d/2 yellow



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24029CP	24	1.2	B8,5d/2	48402428	8 711500 484024	8711500484031	8727900391190	-	5x10

# Kits





# Spare and headlight restoration **kits** for cars and trucks

For increased **safety**, it is **recommended** by most European countries that all vehicles be equipped with a **homologated spare kit**. It will not only keep drivers in **compliance** with the law, but will also keep them **safer** as they will always be prepared to **replace** a burned-out lamp.

Our **Headlight restoration kit** renovates car, truck and two-wheeler lenses to like-new condition. It's our **cost-effective alternative** to complete headlight replacement.



## 12V spare kits

### Easy Kit H1



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55472EKMM	12	-	-	69551928	8 727900 695519	-	8727900695533	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A
Quantity	1	-	-	-	1	1	1	1	1

### Easy Kit H4



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55473EKMM	12	-	-	69555728	8 727900 695557	-	8727900695571	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A
Quantity	-	1	-	-	1	1	1	1	1

### Easy Kit H7



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55474EKMM	12	-	-	69558828	8 727900 695588	-	8727900695601	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A
Quantity	-	-	1	-	1	1	1	1	1

### Easy Kit H1/H7



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55475EKMM	12	-	-	69562528	8 727900 695625	-	8727900695656	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A
Quantity	1	-	1	-	1	1	1	1	1





## 12V spare kits

### Essential Box H1



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55717EBKM	12	-	-	70032928	8 727900 700329	-	8727900700336	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A	Fuse 15A	Fuse 20A
Quantity	1	-	-	-	1	1	1	1	1	1	1

### Essential Box H4



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55718EBKM	12	-	-	70034328	8 727900 700343	-	8727900700350	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A	Fuse 15A	Fuse 20A
Quantity	-	1	-	-	1	1	1	1	1	1	1

### Essential Box H7



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55719EBKM	12	-	-	70036728	8 727900 700367	-	8727900700374	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A	Fuse 15A	Fuse 20A
Quantity	-	-	1	-	1	1	1	1	1	1	1

### Essential Box H1/H7



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55720EBKM	12	-	-	70038128	8 727900 700381	-	8727900700398	ECE	5

#### Content

Lamp type	H1	H4	H7	R2	P21W	P21/5W	PY21W	W5W	Fuse 10A	Fuse 15A	Fuse 20A
Quantity	1	-	1	-	1	1	1	1	1	1	1

## 24V spare kits

### MiniKit H4 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55554SKMDKM	24	-	-	69586130	8 727900 695861	-	8727900695885	ECE	10

#### Content

Lamp type	H4	H7	P21W	R5W	R10W	C5W	T4W	Fuse15A	Fuse 20A	Fuse 30A
Quantity	1	-	1	1	1	1	1	1	1	1

### MiniKit H7 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55555SKMDKM	24	-	-	69590830	8 727900 695908	-	8727900695939	ECE	10

#### Content

Lamp type	H4	H7	P21W	R5W	R10W	C5W	T4W	Fuse15A	Fuse 20A	Fuse 30A
Quantity	-	1	1	1	1	1	1	1	1	1

### MaxiKit H4 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55559LKMDKM	24	-	-	69684494	8 727900 696844	-	8727900696851	ECE	4

#### Content

Lamp type	H4	P21W	P21/5W	PY21W	R5W	R10W	C5W	W5W	T4W	Fuse 10A	Fuse 15A	Fuse 20A	Fuse 30A
Quantity	2	2	2	1	3	2	2	1	1	2	2	2	2

### MaxiKit H7 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55560LKMDKM	24	-	-	69686894	8 727900 696868	-	8727900696875	ECE	4

#### Content

Lamp type	H7	P21W	P21/5W	PY21W	R5W	R10W	C5W	W5W	T4W	Fuse 10A	Fuse 15A	Fuse 20A	Fuse 30A
Quantity	2	2	2	1	3	2	2	1	1	2	2	2	2

### MaxiKit H1/H7 MasterDuty



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
55561LKMDKM	24	-	-	69688294	8 727900 696882	-	8727900696899	ECE	4

#### Content

Lamp type	H1	H7	P21W	P21/5W	PY21W	R5W	R10W	C5W	W5W	T4W	Fuse 10A	Fuse 15A	Fuse 20A	Fuse 30A
Quantity	1	1	2	2	1	3	2	2	1	1	2	2	2	2



# Headlight restoration kit

## Restores headlight lenses to like-new condition!

- **Less glare and up to 100% brighter lenses**
- **Provides safer night-time driving**
- **Removes haze and yellowing from harmful UV-rays and dirt**
- **Professional results without power tools in 30 minutes**
- **High-quality and economical**
- **2-year UV-protection guaranteed**

Removes the fading and yellowing of headlight lenses and restores them to their original state of **transparency** for **greater safety**. Headlight lenses fade and oxidize from constant exposure to the elements and become scratched due to impacts.



Before



After



Ordering number	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
HRK00XM	39976931	8 727900 399769	-	8727900399776	-	6

# Xenon



# Car and truck

lighting



# Which **xenon lamp** do you need?



## Enhanced brightness

Up to **150% more vision\***

**Xenon X-tremeVision gen2**



Ideal for replacement

**Xenon Vision**



Standard 

Xenon X-tremeVision gen2 

Beam performance\* 

Light color   
Standard: 4150 K

Available in **D1S, D2S, D2R, D3S, D4S, D5S**

Standard 

Xenon Vision 

Beam performance 

Light color   
Standard: 4150 K

Available in **D1S, D1R, D2S, D2R, D3S, D3R, D4S, D4R, D5S, D8S**

## Unique style

**Homogeneous white LED effect**

**Xenon WhiteVision gen2**



Standard 

Xenon WhiteVision gen2 

Beam performance\* 

Light color   
Standard: 4150 K

Available in **D1S, D2S, D2R, D3S**

## Extended lifetime

Peace of mind **4 + 3 years warranty**

**Xenon LongerLife\*\***



Standard 

Xenon LongerLife 

Beam performance 

Lifetime   
Standard: 4150 K

Available in **D1S, D2S, D2R**

Images for illustration purposes only.

\* Compared to the minimum legal standard (except for D2R that provides up to 20% more vision)

\*\* Not available in all countries, please contact your sales representative

[philips.com/automotive](http://philips.com/automotive)



# Xenon X-tremeVision gen2

## Our brightest xenon lamp

- Optimal light performance
- Up to 150% more vision\*
- Maximum safety and visibility
- Designed for demanding drivers

Philips Xenon X-tremeVision gen2 is the latest development in **Xenon technology**. It offers the **most powerful** beam with light emission pushed to the limit. This means outstanding light performance with a unique light setting for **optimal driving comfort**.

[www.philips.com/xenongen2](http://www.philips.com/xenongen2)

\*Compared to the minimum legal standard (except for D2R that provides up to 20% more vision, and D5S which supports up to +120% more vision).



Car and truck lighting



Standard



Xenon X-tremeVision gen2

Available in C1 and S1 packaging



Available in



D1S

D2S

D2R

D3S

D4S

D5S

Images for illustration purposes only **63**

Xenon



Enjoy your passion

## Xenon WhiteVision gen2

### Ultimate white LED effect

- Intense homogeneous bright white light
- Perfect match with LED lighting on your car
- Up to 5000 K white light on the road
- Up to 120% more vision\*
- 100% road legal

Philips Xenon WhiteVision gen2 lamps create an **intense white look** of your car and produce brighter, homogeneous white light on the road.

[www.philips.com/xenongen2](http://www.philips.com/xenongen2)

\*Compared to the minimum legal standard (except for D2R that provides up to 20% more vision).



Standard

Xenon WhiteVision gen2

Available in C1 and S1 packaging



Available in



D1S

D2S

D2R

D3S





**4** years warranty  
**+3**

## Xenon LongerLife

### Peace of mind with the longest guarantee

Equip your car with Philips Xenon LongerLife lamps and you can drive up to 7 years without the worry of lamp failures. Philips Xenon LongerLife lamps automatically come with a **4-year warranty**. Register your purchase online and you can extend this warranty by an **extra 3 years**.

Available in C1 and S1 packaging



Available in



### 3 years extra warranty for free in 3 simple steps

Register online at [www.philips.co.uk/xenonwarranty](http://www.philips.co.uk/xenonwarranty), within 30 days of purchase



**1** Connect to [www.philips.co.uk/xenonwarranty](http://www.philips.co.uk/xenonwarranty) to confirm you've purchased a genuine Philips product by verifying the security code located on the certificate of authenticity sticker.



**2** Fill in your personal information, indicate your point-of-purchase and provide the proof-of-purchase.



**3** Print and save your 7-year warranty certificate together with your proof-of-purchase.



You can now drive safely and worry-free for 7 years!



# Xenon Vision

## Ideal for replacement

- **Single-lamp replacement technology: new lamp matches color temperature of the unchanged one**
- Ideal economical solution for **a single-lamp replacement**
- **Homologated 4300K**

Philips Xenon Vision allows drivers to replace a single burned-out lamp while **matching** the **color** of the unchanged one.



Standard



Xenon Vision

Available in C1 and S1 packaging



Available in



D1S



D1R



D2S



D2R



D3S



D3R



D4S



D4R



D5S



D8S



Car and truck lighting

Xenon

## D1S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415VIS1	85	35	PK32d-2	36489733	8 727900 364897	-	8727900364903	ECE	2
85415VIC1	85	35	PK32d-2	36473633	8 727900 364736	-	8727900364743	ECE	2

## D1S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415XV2S1	85	35	PK32d-2	37697533	8 727900 376975	-	8727900376982	ECE	2
85415XV2C1	85	35	PK32d-2	37701933	8 727900 377019	-	8727900377026	ECE	2

## D1S LongerLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415SYS1	85	35	PK32d-2	37246533	8 727900 372465	-	8727900372472	ECE	2
Ordering codes for Germany, Austria, Switzerland, Netherlands, Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom									
85415SYC1	85	35	PK32d-2	37516933	8 727900 375169	-	8727900375176	ECE	2
Ordering codes for Germany, Austria, Switzerland, Netherlands									
85415SYC1	85	35	PK32d-2	37250233	8 727900 372502	-	8727900372519	ECE	2
Ordering codes for Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom									
85415SYC1	85	35	PK32d-2	37522033	8 727900 375220	-	8727900375237	ECE	2
Ordering codes for Central Europe (Poland, Romania, Czech Republic) and other East European countries									

## D1S WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415WHV2S1	85	35	PK32d-2	36072133	8 727900 360721	-	8727900377248	ECE	2
85415WHV2C1	85	35	PK32d-2	37725533	8 727900 377255	-	8727900377262	ECE	2

## D1R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85409VIC1	85	35	PK32d-3	36475033	8 727900 364750	-	8727900364767	ECE	2

## D2S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122VIS1	85	35	P32d-2	36491033	8 727900 364910	-	8727900364927	ECE	2
85122VIC1	85	35	P32d-2	36477433	8 727900 364774	-	8727900364781	ECE	2

## D2S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122XV2S1	85	35	P32d-2	37703333	8 727900 377033	-	8727900377040	ECE	2
85122XV2C1	85	35	P32d-2	37707133	8 727900 377071	-	8727900377088	ECE	2

Philips Xenon LongerLife lighting is not available in all countries. For more information, please contact your Philips representative.

## D2S LongerLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122SYS1	85	35	P32d-2	37254033	8 727900 372540	-	8727900372557	ECE	2
Ordering codes for Germany, Austria, Switzerland, Netherlands, Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom									
85122SYC1	85	35	P32d-2	37518333	8 727900 375183	-	8727900375190	ECE	2
Ordering codes for Germany, Austria, Switzerland, Netherlands									
85122SYC1	85	35	P32d-2	37244133	8 727900 372441	-	8727900372458	ECE	2
Ordering codes for Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom									
85122SYC1	85	35	P32d-2	37524433	8 727900 375244	-	8727900375251	ECE	2
Ordering codes for Central Europe (Poland, Romania, Czech Republic) and other East European countries									

## D2S WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122WHV2S1	85	35	P32d-2	37727933	8 727900 377279	-	8727900377286	ECE	2
85122WHV2C1	85	35	P32d-2	37729333	8 727900 377293	-	8727900377309	ECE	2

## D2R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126VIS1	85	35	P32d-3	36493433	8 727900 364934	-	8727900364941	ECE	2
85126VIC1	85	35	P32d-3	36479833	8 727900 364798	-	8727900364804	ECE	2

## D2R X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126XV2S1	85	35	P32d-3	37709533	8 727900 377095	-	8727900377101	ECE	2
85126XV2C1	85	35	P32d-3	37711833	8 727900 377118	-	8727900377125	ECE	2

## D2R LongerLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126SYS1	85	35	P32d-3	37248933	8 727900 372489	-	8727900372496	ECE	2
Ordering codes for Germany, Austria, Switzerland, Netherlands, Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom									
85126SYC1	85	35	P32d-3	37520633	8 727900 375206	-	8727900375213	ECE	2
Ordering codes for Germany, Austria, Switzerland, Netherlands									
85126SYC1	85	35	P32d-3	37252633	8 727900 372526	-	8727900372533	ECE	2
Ordering codes for Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom									
85126SYC1	85	35	P32d-3	37526833	8 727900 375268	-	8727900375275	ECE	2
Ordering codes for Central Europe (Poland, Romania, Czech Republic) and other East European countries									

## D2R WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126WHV2S1	85	35	P32d-3	37731633	8 727900 377316	-	8727900377323	ECE	2
85126WHV2C1	85	35	P32d-3	37733033	8 727900 377330	-	8727900377347	ECE	2

Philips Xenon LongerLife lighting is not available in all countries. For more information, please contact your Philips representative.

## D3S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42403VIS1	42	35	PK32d-5	36495833	8 727900 364958	-	8727900364965	ECE	2
42403VIC1	42	35	PK32d-5	36481133	8 727900 364811	-	8727900364828	ECE	2

## D3S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42403XV2S1	42	35	PK32d-5	37713233	8 727900 377132	-	8727900377149	ECE	2
42403XV2C1	42	35	PK32d-5	37717033	8 727900 377170	-	8727900377187	ECE	2

## D3S WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42403WHV2S1	42	35	PK32d-5	37735433	8 727900 377354	-	8727900377361	ECE	2
42403WHV2C1	42	35	PK32d-5	37737833	8 727900 377378	-	8727900377385	ECE	2

## D3R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42306VIC1	42	35	PK32d-6	36483533	8 727900 364835	-	8727900364842	ECE	2

## D4S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42402VIC1	42	35	P32d-5	36485933	8 727900 364859	-	8727900364866	ECE	2

## D4S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42402XV2S1	42	35	P32d-5	37719433	8 727900 377194	-	8727900377200	ECE	2
42402XV2C1	42	35	P32d-5	37721733	8 727900 377217	-	8727900377224	ECE	2

## D4R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42406VIC1	42	35	P32d-6	36487333	8 727900 364873	-	8727900364880	ECE	2

## D5S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12410C1	12	25	PK32d-7	36981633	8 727900 369816	-	8727900369823	ECE	2

## D5S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12410XV+C1	12/24	25	PK32d-7	35392133	8 727900 353921	-	8719018005090	ECE	2

## D8S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12411C1	42	25	PK32d-1	00467333	8 719018 004673	-	8719018004680	ECE	2



# LED





# Car and truck

lighting



# Which LED lamp do you need?



## Original automotive performance in LED

### Ultinon Pro9000

Lumileds TopContact OEM LED

**2** years **+3** extended warranty

Beam performance\*

Standard Up to **+250%\*\***

Light color Up to **5800 K**  
Standard: 3100 K

Lifetime Up to **5000 h**

Available in  
LED-HL [≈H1], [≈H3], [≈H4], [≈H7], [≈HB3/4], [≈H11], [≈HIR2]  
LED-FL [≈H8/H11/H16]

## The perfect blend of performance and durability

### Ultinon Pro5000

Automotive grade LED

**2** years **+1** extended warranty

Beam performance\*

Standard Up to **+160%\*\***

Light color Up to **5800 K**  
Standard: 3100 K

Lifetime Up to **3000 h**

Available in  
LED-HL [≈H1], [≈H3], [≈H4], [≈H7], [≈HB3/4], [≈H11], [≈HIR2]  
LED-FL [≈H8/H11/H16]

## Transform your car lights

### Ultinon Essential

Beam performance\*

Standard **Extra performance**

Light color Up to **6500 K**  
Standard: 3100 K

Lifetime Up to **1500 h**

Available in  
LED-HL [≈H1], [≈H3], [≈H4], [≈H7], [≈HB3/4], [≈H11], [≈HIR2]  
LED-FL [≈H8/H11/H16]

Images for illustration purposes only.

\* Applies to Ultinon Pro9000 HL [≈H4], [≈H7], [≈HB3/4], [≈H11], [≈HIR2] and FOG [≈H8/H11/H16].

\*\* Compared to the minimum legal standard for halogen bulbs. Up to +200% for Ultinon Pro9000 HL [≈H1] and [≈H3] types.



It is your own responsibility to ensure that the use of the LED retrofit lights complies with applicable local legal requirements.



Car and truck lighting

LED




# Ultinon Pro9000

## Original automotive performance in LED

- **Exclusive** automotive LED technology thanks to Lumileds TopContact LED chips\*
- Up to **250% brighter homogeneous** light\*\*
- Up to **5 800 K** color temperature for **cool white light**
- **Optimal spectrum** for best road sign visibility
- **IP54**: dust tight and water resistant
- Unique Philips heat management technologies
- **SafeBeam** technology for glare-free driving
- Lifetime up to **5,000 hours**
- **High compatibility** with major vehicle models
- **Extended warranty** up to **5 years**.

\*Except H1 and H3 bulb types.

\*\*Compared to the minimum legal standard for halogen bulbs

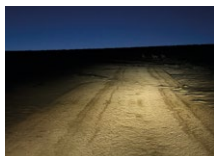

Standard halogen



Ultinon Pro9000

Available in X2 packaging



Available in



HL [=H1]



HL [=H3]



HL [=H4]



HL [=H7]



FL  
[=H8/H11/H16]



HL [=H11]



HL  
[=H3/HB4]



HL [=HIR2]








# Ultinon Pro5000

## The perfect blend of performance and durability

- Get up to **+160%** brighter light\* for superior visibility
- Up to **5 800 K** color temperature for **pure white light**
- **SafeBeam** technology for glare-free driving
- Lifetime up to **3,000 hours**
- **High compatibility** with major vehicle models
- **Extended warranty** up to **3 years**.

\*Compared to the minimum legal standard for halogen bulbs

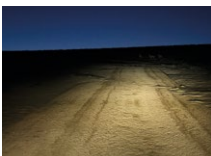

Standard halogen



Ultinon Pro5000

Available in



HL [≈H1]



HL [≈H3]



HL [≈H4]



HL [≈H7]



FL [≈H8/H11/H16]



HL [≈H11]



HL [≈HB3/HB4]



HL [≈HIR2]

Available in X2 packaging






# Ultinon Essential

## Stand out from the crowd

- Up to **6,500 K color temperature** for stylish white light
- Reliable durability with **dual heat dissipation**
- Compact **all in one design** for plug and play use
- Powerful brightness with precise beam
- Compatible with major vehicle models
- **Long-lasting performance**

Philips Ultinon Essential is not available in all countries. For more information, please contact your Philips representative.

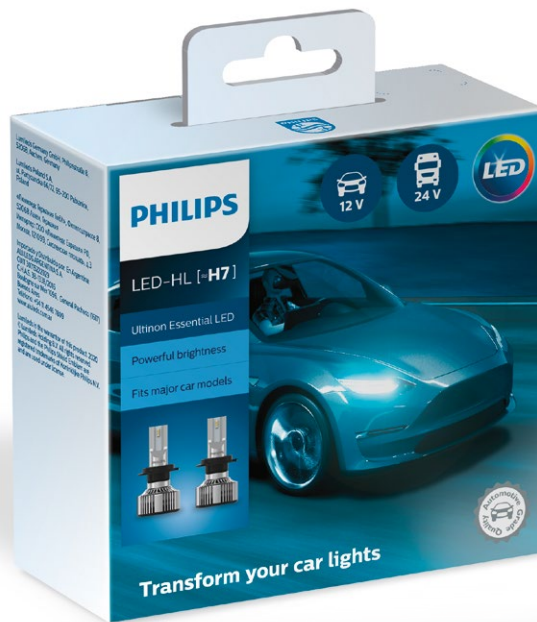


Car and truck lighting

Available in X2 packaging



Available in

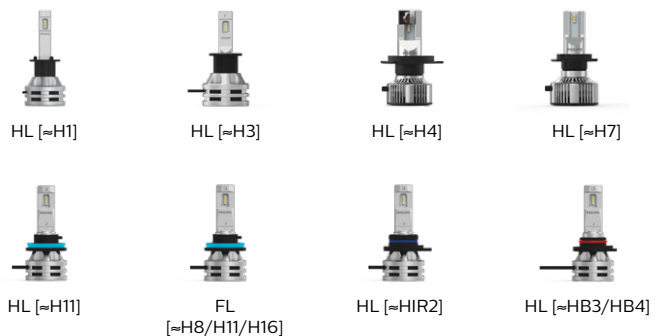

LED



It is your own responsibility to ensure that the use of the LED retrofit lights complies with applicable local legal requirements.



## Ultinon Pro6000 SL

### Brighter, elegant signals

The all-new Philips Ultinon Pro6000 LED bulbs offer superior visibility and style for your car. Philips high-end LED technology offers enhanced performance and easy replacement for greater safety and elegant appearance. Select from this range of bright interior and signaling lights that will transform your driving experience.



#### Superior visibility

- Powerful light with high lumen output
- Variety of powerful white light: 4000/6000/8000 K for SL-T10 [≈W5W]
- Instant-on technology for more safety
- Uniform light distribution

#### High-end, elegant signaling

- Stylish LED signaling light available in white, vibrant red and vibrant amber

#### Performance made to last

- High-end LED technology
- Long lifetime up to 5000 hours
- *HeatShield* technology to endure any thermal challenge for T10 bulbs

#### Simple plug-and-play replacement

- Electrically compatible with most cars.
- No flickering thanks to dark-current immunity for Festoons
- Standard caps and polarity-free for quick and easy replacement (W5W, W16, W21/5W, P21/5W, R5/R10)
- Large portfolio for car applications







# Ultinon Pro6000 SL

Available in

## 12V



SL-T10 [≈W5W]  
Warm White



SL-T10 [≈W5W]  
Cool White



SL-T10 [≈W5W]  
Cool Blue



SL-AMB [≈W5W]  
Amber



SL-T16  
[≈W16W]



SL-WHITE  
[≈P21W]



SL-RED  
[≈P21W]



SL-AMB  
[≈P21W]



SL-FEST 30mm  
Warm White



SL-FEST 30mm  
Cool White



SL-WHITE  
[≈P21/5W]



SL-RED  
[≈P21/5W]



SL-AMB  
[≈P21/5W]



SL-FEST 38mm  
Warm White



SL-FEST 38mm  
Cool White



SL-WHITE  
[≈W21W]



SL-RED  
[≈W21W]



SL-AMB  
[≈W21W]



SL-FEST 43mm  
Warm White



SL-FEST 43mm  
Cool White



SL-WHITE  
[≈W21/5W]



SL-RED  
[≈W21/5W]



SL-AMB  
[≈W21/5W]

## 24V



LED-T10 [≈W5W]  
Warm White



LED-T10 [≈W5W]  
Cool White



LED-FEST 30mm  
Cool White



LED-WHITE  
[≈R5W/R10W]



## Ultinon Pro3000 SL

# Stand out from the crowd

All new Ultinon Pro3000 provides the best value for your money. Whether you're looking for a bright, new interior or a head turning exterior, Philips leading edge LED technology makes the difference with instant-on stop signal and uniform light distribution.



### Powerful brightness & performance

- Stylish white light of up to 6000 K for T10 (≈ W5W), Festoon, W21 and P21
- Red signaling available in P21, P21/5W, W21, W21/5W
- Matching the performance standard\*

### Simple plug and play

- Easily upgrade from conventional bulb to LED with simple plug and play thanks to the LED standard caps.

### Philips Reliability

- Longer lifetime of up to 3000 hours

### Compatible with major vehicle models

- 12V compatible
- Optional CANbus available for troubleshooting

\*Comply with ECE R37 lumen output requirement (for indication use only)





# Ultinon Pro3000 SL

Available in

12V



SL-FEST 30mm  
Cool white



SL-FEST 38mm  
Cool white



SL-FEST 43mm  
Cool white



SL-WHITE  
[=W5W]



SL-WHITE  
[=W21W]



SL-WHITE  
[=P21W]



SL-RED  
[=P21/5W]



SL-RED  
[=W21W]



SL-RED  
[=P21W]



SL-RED  
[=W21/5W]

# Adapter CANbus

- **Prevent inaccurate dashboard warnings**
- For signaling bulbs, prevent flickering
- Easy installation
- Compatible with all Philips LED ranges

Available in




HL [≈H4]  
HL [≈H7]  
HL [≈H8/H11/H16]  
HL [≈HB3/HB4/HIR2]



SL [≈5W]  
SL [≈21W]

Available in X2 packaging

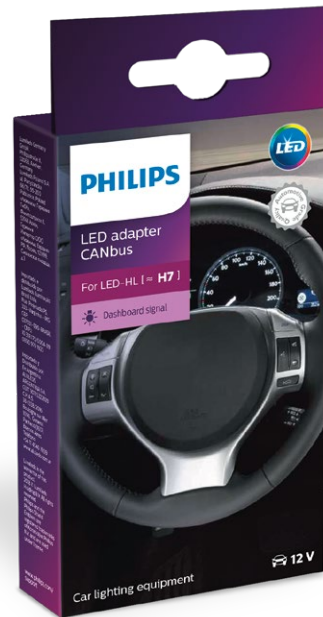

# Light Repair CANbus


- **Prevents flickering in headlight bulbs**
- Easy installation
- Compatible with all Philips LED ranges
- Integrated in our new generation bulbs Ultinon Pro5000\* and Ultinon Pro9000\*

Available in



HL [≈H7]

Available in X2 packaging

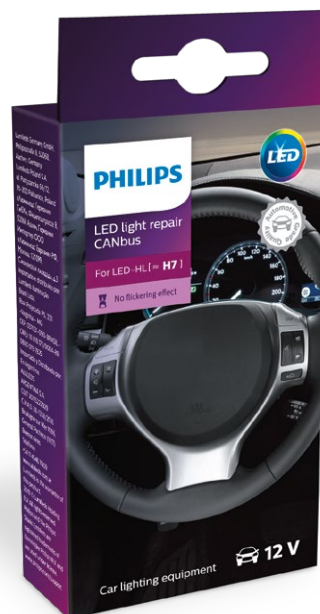

\* Philips Light Repair CANbus is directly integrated into our new-generation bulbs. No need for additional accessories! In some rare cases, an additional CANbus might be required to eliminate the flickering effect completely.



# Which LED for which function?



Headlights



Front fog lights



Front position/  
parking lights



Front indicators



Dashboard lights



Interior lights




Side indicators



## Ultinon Pro9000 HL



## Ultinon Pro6000 SL

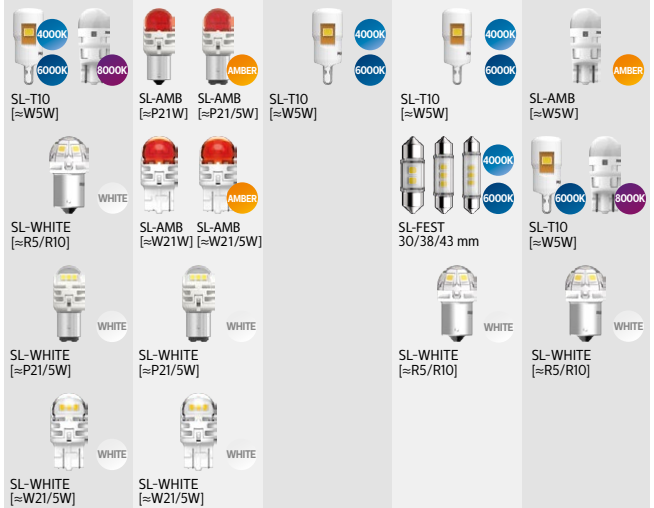


## Ultinon Pro5000 HL



## Ultinon Pro3000 SL




## Ultinon Essential HL

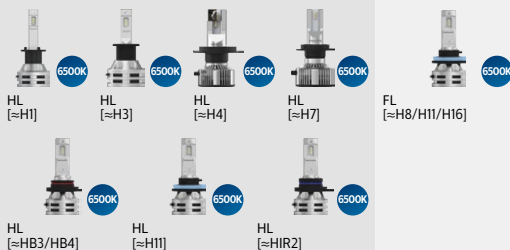

## LED adapters



## LED adapters



philips.com/led-bulbs



It is your own responsibility to ensure that the use of the LED retrofit lights complies with applicable local legal requirements.



Glove compartment lights	Rear position/parking lights	Rear indicators	Rear fog lights	Trunk lights	License plate lights	3 <sup>rd</sup> stop light	Stop lights	Reversing light
SL-T10 [=W5W] SL-FEST 30/38/43 mm SL-WHITE [=R5/R10]	SL-RED [=P21/5W] SL-RED [=W21/5W] SL-RED [=W21/5W]	SL-AMB [=P21W] SL-AMB [=P21/5W] SL-AMB [=W21W] SL-AMB [=W21/5W]	SL-RED [=P21W] SL-RED [=W21W]	SL-T10 [=W5W] SL-FEST 30/38/43 mm SL-WHITE [=R5/R10]	SL-T10 [=W5W] SL-FEST 30/38/43 mm SL-WHITE [=R5/R10]	SL-RED [=P21W] SL-RED [=W21W] SL-RED [=R5/R10]	SL-RED [=P21W] SL-RED [=P21/5W] SL-RED [=W21W] SL-RED [=W21/5W]	SL-WHITE [=P21W] SL-WHITE [=W21W] SL-T16 [=W16W] SL-WHITE [=W21W]
IL/SL-WHITE [=W5W] IL/SL-WHITE Fest 30/38/43 mm	SL-RED [=P21/5W] SL-RED [=W21/5W]		SL-RED [=P21W] SL-RED [=W21W]	IL/SL-WHITE [=W5W] SL-WHITE Fest 30/38/43 mm	SL-WHITE [=W5W] SL-WHITE Fest 30/38/43 mm	SL-RED [=P21W] SL-RED [=W21W]	SL-RED [=P21W], [=P21/5W] SL-RED [=W21W], [=W21/5W]	SL-WHITE [=P21W] SL-WHITE [=W21W]
CANbus adapter SL [=5W]	CANbus adapter SL [=21W]	CANbus adapter SL [=21W]	CANbus adapter SL [=21W]	CANbus adapter SL [=5W]	CANbus adapter SL [=5W]	CANbus adapter SL [=21W]	CANbus adapter SL [=21W]	CANbus adapter SL [=21W]

Philips Ultreon Essential is not available in all countries. For more information, please contact your Philips representative.

## 12V/24V LED Headlighting

### HL [≈H1] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11258U90CW2	12/24	18	P14.5s	00714831	8 719018 007148	-	8719018007155	-	6

### HL [≈H1] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11258U50CW2	12/24	15	P14.5s	00778031	8 719018 007780	-	8719018007797	-	6

### HL [≈H1] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11258UE2X2	12/24	19	P14.5s	00330031	8 719018 003300	-	8719018003317	-	6

### HL [≈H3] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11336U90CW2	12/24	18	PK22s	00726131	8 719018 007261	-	8719018007278	-	6

### HL [≈H3] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11336U50CW2	12/24	15	PK22s	00790231	8 719018 007902	-	8719018007919	-	6

### HL [≈H3] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11336UE2X2	12/24	19	PK22s	00332431	8 719018 003324	-	8719018003331	-	6

### HL [≈H4] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11342U90CW2	12/24	18	P43t-38	00718631	8 719018 007186	-	8719018007193	-	6

### HL [≈H4] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11342U50CW2	12/24	15	P43t-38	00782731	8 719018 007827	-	8719018007834	-	6

### HL [≈H4] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11342UE2X2	12/24	21	P43t-38	00318831	8 719018 003188	-	8719018003195	-	6

### HL [≈H7] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11972U90CW2	12/24	18	PX26d	00720931	8 719018 007209	-	8719018007216	-	6



## HL [≈H7] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11972U50CW2	12/24	15	PX26d	00784131	8 719018 007841	-	8719018007858	-	6

## HL [≈H7] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11972UE2X2	12/24	20	PX26d	00320131	8 719018 003201	-	8719018003218	-	6

## HL [≈H11] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11362U90CW2	12/24	18	PGJ19-2	00716231	8 719018 007162	-	8719018007179	-	6

## HL [≈H11] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11362U50CW2	12/24	15	PGJ19-2	00780331	8 719018 007803	-	8719018007810	-	6

## HL [≈H11] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11362UE2X2	12/24	24	PGJ19-2	00328731	8 719018 003287	-	8719018003294	-	6

## FL [≈H8/H11/H16] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11366U90CW2	12/24	15	PGJ19-1/2/3	00712431	8 719018 007124	-	8719018007131	-	6

## FL [≈H8/H11/H16] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11366U50CW2	12/24	12	PGJ19-1/2/3	00776631	8 719018 007766	-	8719018007773	-	6

## FL [≈H8/H11/H16] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11366UE2X2	12/24	24	PGJ19-1/2/3	00322531	8 719018 003225	-	8719018003232	-	6

## HL [≈HIR2] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11012U90CW2	12/24	20	PX22d	00724731	8 719018 007247	-	8719018007254	-	6

## HL [≈HIR2] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11012U50CW2	12/24	16	PX22d	00788931	8 719018 007889	-	8719018007896	-	6

## HL [≈HIR2] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11012UE2X2	12/24	24	PX22d	00326331	8 719018 003263	-	8719018003270	-	6

## HL [≈HB3/HB4] Ultinon Pro9000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11005U90CW2	12/24	20	P20d/P22d	00722331	8 719018 007223	-	8719018007230	-	6

## HL [≈HB3/HB4] Ultinon Pro5000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11005U50CW2	12/24	16	P20d/P22d	00786531	8 719018 007865	-	8719018007872	-	6

## HL [≈HB3/HB4] Ultinon Essential



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11005UE2X2	12/24	24	P20d/P22d	00324931	8 719018 003249	-	8719018003256	-	6

Philips Ultinon Essential is not available in all countries. For more information, please contact your Philips representative.





Car and truck lighting

LED

## 12V LED signaling and interior lighting

### SL-FEST 30 mm 6 000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11860CU60X1	12	1.0	SV8.5	01530330	8 719018 015303	-	8719018015310	-	10

### SL-FEST 30 mm 6000K Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11860U30CWB1	12	0.6	SV8,5-8	00674530	8 719018 006745	-	8719018006752	-	10

### SL-FEST 30 mm 4000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11860WU60X1	12	1.0	SV8,5	01524230	8 719018 015242	-	8719018015259	-	10

### SL-FEST 38 mm 6 000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11854CU60X1	12	1.0	SV8,5	01532730	8 719018 015327	-	8719018015334	-	10

### SL-FEST 38 mm 6000K Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11854U30CWB1	12	0.6	SV8,5-8	00676930	8 719018 006769	-	8719018006776	-	10

### SL-FEST 38 mm 4000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11854WU60X1	12	1.0	SV8,5	01526630	8 719018 015266	-	8719018015273	-	10

### SL-FEST 43 mm 6 000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11866CU60X1	12	1.0	SV8,5	01534130	8 719018 015341	-	8719018015358	-	10

### SL-FEST 43 mm 6 000 K Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11864U30CWB1	12	0.6	SV8,5-8	00678330	8 719018 006783	-	8719018006790	-	10

### SL-FEST 43 mm 4000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11866WU60X1	12	1.0	SV8,5	01528030	8 719018 015280	-	8719018015297	-	10

### SL-AMBER [≈P21/5W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11499AU60X2	12	2.5/0.5	BAY15D	01546430	8 719018 015464	-	8719018015471	-	10

### SL-RED [≈P21/5W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11499RU60X2	12	2.5/0.5	BAY15D	01538930	8 719018 015389	-	8719018015396	-	10

## SL-RED [≈P21/5W] Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11499U30RB2	12	0.8/1.75	BAY15d	00682030	8 719018 006820	-	8719018006837	-	10

## SL-WHITE [≈P21/5W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11499CU60X2	12	2.5/0.5	BAY15D	01544030	8 719018 015440	-	8719018015457	-	10

## SL-AMBER [≈P21W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11498AU60X2	12	2,3	BAU15s	01548830	8 719018 015488	-	8719018015495	-	10

## SL-RED [≈P21W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11498RU60X2	12	2,3	BA15S	01542630	8 719018 015426	-	8719018015433	-	10

## SL-RED [≈P21W] Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11498U30RB2	12	1.75	BA15s	00640030	8 719018 006400	-	8719018006417	-	10

## SL-WHITE [≈P21W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11498CU60X2	12	2,3	BA15S	01540230	8 719018 015402	-	8719018015419	-	10

## SL-WHITE [≈P21W] Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11498U30CWB2	12	1.75	BA15s	00680630	8 719018 006806	-	8719018006813	-	10

## SL-WHITE [≈W16W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11067CU60X1	12	2,4	W2.1x9.5d	01566230	8 719018 015662	-	8719018015679	-	10

## SL-AMBER [≈W21/5W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11066AU60X2	12	2.5/0.5	W3x16q	01556330	8 719018 015563	-	8719018015570	-	10

## SL-RED [≈W21/5W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11066RU60X2	12	2.5/0.5	W3x16q	01552530	8 719018 015525	-	8719018015532	-	10



It is your own responsibility to ensure that the use of the LED retrofit lights complies with applicable local legal requirements.

## SL-RED [≈W21/5W] Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11066U30RB2	12	0.8/1.75	W3x16q	00642430	8 719018 006424	-	8719018006431	-	10

## SL-WHITE [≈W21/5W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11066CU60X2	12	2.5/0.5	W3x16q	01550130	8 719018 015501	-	8719018015518	-	10

## SL-AMBER [≈W21W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11065AU60X2	12	2,3	WX3x16d	01558730	8 719018 015587	-	8719018015594	-	10

## SL-RED [≈W21W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11065RU60X2	12	2,3	W3x16d	01564830	8 719018 015648	-	8719018015655	-	10

## SL-RED [≈W21W] Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11065U30RB2	12	1.75	W3x16d	00686830	8 719018 006868	-	8719018006875	-	10

## SL-WHITE [≈W21W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11065CU60X2	12	2,3	W3x16d	01554930	8 719018 015549	-	8719018015556	-	10

## SL-WHITE [≈W21W] 6000 K Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11065U30CWB2	12	1.75	W3x16d	00684430	8 719018 006844	-	8719018006851	-	10

## SL-AMBER [≈W5W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11961AU60X2	12	0,5	W2.1x9.5d	01560030	8 719018 015600	-	8719018015617	-	10

## SL-T10 [≈W5W] 8 000 K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11961XU60X2	12	0,7	W2.1x9.5d	01522830	8 719018 015228	-	8719018015235	-	10

## SL-T10 [≈W5W] 6 000 K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11961CU60X2	12	0,9	W2.1x9.5d	01516730	8 719018 015167	-	8719018015174	-	10

## SL-T10 [≈W5W] 6 000 K Ultinon Pro3000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11961U30CWB2	12	0,6	W2.1x9.5d	00694330	8 719018 006943	-	8719018006950	-	10

## SL-T10 [≈W5W] 4 000 K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
11961WU60X2	12	0,9	W2.1x9.5d	01514330	8 719018 015143	-	8719018015150	-	10

## LED adapters

### CANbus adapter for LED 5W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12956X2	12	5	-	39722294	8 727900 397222	-	8719018005007	-	4

### CANbus adapter for LED 21W



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
18957X2	12	21	-	39587794	8 727900 395877	-	8719018004956	-	4

### CANbus adapter for HL [≈H4]



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
18960C2	12	10	-	39809094	8 727900 398090	-	8719018004963	-	4

### CANbus adapter for HL [≈H7]



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
18952C2	12	10	-	05064994	8 719018 050649	-	8719018004994	-	4

### CANbus adapter for FL [≈H8/H11/H16]



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
18954C2	12	10	-	05066394	8 719018 050663	-	8719018004970	-	4

### CANbus adapter for HL [≈HB3/HB4/HIR2]



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
18956C2	12	10	-	05068794	8 719018 050687	-	8719018004987	-	4

### Light Repair for HL [≈H7]



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
18961C2	12	10	-	00281594	8 719018 002815	-	8719018002822	-	4







## 24V LED interior and signaling lighting

### SL-FEST 30mm Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24844CU60X1	24	1,5	SV8.5	01536530	8 719018 015365	-	8719018015372	-	10

### SL-WHITE [≈R5W/R10W] Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24805CU60X2	12/24V	1	BA15s	01562430	8 719018 015624	-	8719018015631	-	10

### SL-T10 [≈W5W] 6000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24961CU60X2	24	1	W2.1x9.5d	01520430	8 719018 015204	-	8719018015211	-	10

### SL-T10 [≈W5W] 4000K Ultinon Pro6000



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
24961WU60X2	24	1	W2.1x9.5d	01518130	8 719018 015181	-	8719018015198	-	10

# Glossary

## ■ AirCool technology

Smart cooling system that diverts heat away from the light's critical components (active cooling with a fan).

## ■ AirFlux technology

Optimal thermal management resulting in longer lifetime (passive cooling using heat sink).

## ■ Asymmetrical beam pattern

An offset beam pattern for low-beam applications. Provides a longer beam in the lane of traffic, which avoids blinding oncoming traffic.

## ■ Automotive Grade Quality

The Philips Automotive Grade Quality products are designed and developed following strict quality control processes (including applicable ISO norms), leading to consistently high production standards.

## ■ Ballast

The electronic driver that controls a xenon HID bulb.

## ■ Base

Bottom part of the bulb which ensures a proper mechanical and electrical connection with the lamp unit of the car. Its precision is important for a correct beam pattern.

## ■ Board voltage

Electrical voltage in the board net of the vehicle. In cars, the operational voltage at the bulb connector typically varies between 13 and 14 volts (V). The official test voltage for halogen headlight bulbs is 13.2V according to ECE R37. For trucks with a 24V board net the test voltage is 28V. The board voltage has a significant impact on filament bulb lifetime. In general, a 5% voltage increase reduces the lifetime by 50%.

## ■ Burner

Burner is the glass part of a halogen or xenon HID bulb in which the light emission is generated. It consists of hard or quartz glass and contains the filament and the two electrodes.

## ■ Candela (cd)

Unit of luminous intensity that measures the amount of luminous power emitted by a light source in a particular direction.

## ■ CeraLight

Cooling system using ceramic material for enhanced heat and vibration resistance.

## ■ Color temperature

Thermal measure for light color. Derived from the color emitted by a "black body" which is heated up to a certain temperature (see also Kelvin).

## ■ Cut-off zone

The line between the bright and dark zones of low beam light. Above the cut-off zone the amount of light is limited in order to avoid blinding oncoming traffic.

## ■ D(...)

Nomenclature for xenon HID bulbs where **D** stands for "discharge." Available technical types: **D1S**, **D1R**, **D2S**, **D2R**, **D3S**, **D3R**, **D4S**, **D4R** and **D5S**.

**D1** and **D2** First bulbs introduced in 1991

**D3** and **D4** Mercury-free bulbs that replace D1 and D2

For D1 and D3, the electronic high-voltage starter is already integrated in the bulb base. The **S** type is used with projector (lens) systems. Version **R** is used in open reflectors and features an additional coating on the outer tube (pinstripe) which blocks out some areas to avoid glare.

The **D5S** is a 25-watt bulb with integrated starter and integrated ballast.

## ■ Discharge bulb

The correct, technical term of the so-called xenon bulb is **high-intensity discharge** bulb. The light is emitted by an electric arc which is produced between two electrodes. **See also** HID and xenon light.

## ■ DOT

The United States Department of Transportation which oversees federal highway, air, railroad, maritime and other transportation administration functions. It fulfills a role similar to the Economic Commission for Europe (ECE).

## ■ DRL

Daytime Running Lights.

## ■ ECE

Economic Commission for Europe. One of five regional commissions of the United Nations (UN) based in Geneva that contributes to enhancing the effectiveness of the UN through the regional implementation of outcomes of global UN Conferences and Summits. The ECE is responsible for harmonizing technical specifications for vehicles whose regulations are also mandatory in many countries outside Europe.

## ■ ECE R

This stands for the ECE Regulation.

Examples for vehicle lighting:

**R37** Filament lamps

**R99** Gas-discharge light sources

**R48** Installation of lighting and light-signaling devices

## ■ Electric arc

The connecting luminous discharge between the two electrodes of a xenon HID bulb. This is similar in principle to a bolt of lightning. The electric arc is created by the high-voltage starter and stabilized and controlled by the ballast.

## ■ Electrodes

Electrical conductors which are positioned opposite each other in the vessel of a xenon gas-discharge bulb. The electric arc, which emits light, is produced between the electrodes.

## ■ EMI conform

Automotive standards of electromagnetic interference.

## ■ E-mark

The ECE mark of approval. The digit following the "E" indicates in which country the approval has been granted. For example: E1 indicates Germany and E2 indicates France. An approval granted by one ECE member is valid for all member states and is typically adopted by national regulations. Single minor deviations are possible.

### ■ Festoon

A tube-shaped bulb with contacts at each end such as C5W, which is commonly used for interior and license plate lighting.

### ■ Filament

A coiled tungsten wire that emits light.

### ■ H(...)

Nomenclature for halogen bulbs. H = halogen.

The bulbs are numbered consecutively.

The most common types are:

**H1** First halogen bulb (single filament).

**H4** Double filament for both low beam and high beam application in one headlamp unit.

**H7** Most common halogen bulb in Europe for low beam, high beam, and fog lighting.

### ■ Halogen

A gas that is used to create the halogen cycle process in a light bulb. During operation the tungsten molecules evaporate from the tungsten. In the cycle process they combine with the halogen molecules and fall back to the wire. This extends the lifetime of a bulb and allows operation at a higher intensity. Halogen bulbs contain a high-pressure halogen filling. Non-halogen incandescent bulbs often use a vacuum.

### ■ HB(...)

ECE name of original North American bulb types which were approved for use in Europe as well. For example: HB3 refers to 9005 and HB4 refers to 9006.

### ■ Hg

Symbol for mercury (Latin: hydrargyrum). Xenon bulb types D1 and D2 still contain approximately one third of the amount of mercury as a normal domestic energy-saving bulb. D3, D4 und D5 are completely mercury free.

### ■ HID

High Intensity Discharge. Correct technical name for a so-called xenon bulb.

**See also** gas-discharge bulb, xenon light, xenon system.

### ■ High-voltage starter

Creates high-voltage pulses of approximately 20 000 volts to ignite the electric arc in a xenon HID bulb.

### ■ HiPerVision

Very compact signaling-bulb range with high-precision filaments and a long lifetime. For use in signaling lights, fog lamps, rear and daytime running lights.

### ■ Illuminance (lux)

Contrary to luminous flux (lumen), which is a measure of the total amount of light emitted by a light source, illuminance describes the amount of luminous flux per unit area, such as on the road. This is measured with a lux meter.

### ■ IP certification

Dust ingress and splash water protection improving durability.

### ■ Kelvin (K)

A unit of measure of temperature based upon an absolute scale whereby zero (minus 273° C) represents the point where all thermal motion ceases. In lighting, however, this is a measure of color temperature. The higher the color temperature, the whiter and cooler the light appears.

### ■ LED

Light Emitting Diode.

### ■ Lifetime

Statistical data that indicate the failure rate of a percentage of bulbs operated at a specific voltage over a certain period of time. Common lifetime data indication:

**B3** Time when statistically 3% of the test samples have failed

**TC** Time when 63% of the test samples have failed.

### ■ Luminance

The intensity of light emitted from a surface per unit area in a given direction from, for example, the filament or the electric arc of a xenon HID bulb. An important indicator of the amount of light a headlamp unit provides on the road. The unit is candela/m<sup>2</sup> (cd/m<sup>2</sup>).

### ■ Lumen (lm)

Unit of luminous flux.

### ■ Luminous flux (lumen)

The total amount of light that is emitted by a light source in all directions.

### ■ Lux (lx)

Unit of illuminance. 1 Lux = 1 lm/m<sup>2</sup>.

**See also** Illuminance.

### ■ Lux meter

Illuminance measuring device.

### ■ LUXEON®

Lumileds LED chips technology.

### ■ Pb

Symbol for lead (Latin: plumbum).

All Philips automotive bulbs are **lead-free**.

### ■ Quartz glass

Temperature and pressure resistant glass for halogen and xenon HID bulbs. The glass also has a special coating to block out harmful ultraviolet (UV) light.

### ■ SafeBeam technology

Technology that projects the light exactly where you need it on the road.

### ■ Tungsten

Filament and electrode material.

### ■ UV-block

Ultraviolet (UV) rays blocking glass absorbs the UV light created by the filament or the electric arc. UV block is mandatory for all ECE complying car bulbs because UV light can damage the plastic cover of the headlamp.

**See also** Quartz glass.

### ■ Wedge base

Bulb with a glass base, such as W5W. Mainly used for position lights, side indicators and interior lighting.

### ■ Xenon (Xe)

One of the noble gases. Commonly used to refer to HID bulbs.

### ■ Xenon light

Headlights with HID bulbs.

**See also** D(...), Discharge bulb, HID.

### ■ Xenon system

A complete xenon system consists of the HID bulb, the high-voltage starter and the electronic ballast which controls the electric arc.

# Specimen packaging

Discover the perfect anti-theft solution for your store.



VP VisionPlus



LLECO LongLife EcoVision



WVU WhiteVision ultra



XVP X-tremeVision Pro150



RGT RacingVision GT200



VI Xenon Vision



SY Xenon LongerLife



XV2 Xenon X-tremeVision gen2



WHV2 Xenon WhiteVision gen2

## Ordering information

Description	Ordering number	GOC	EAN1	EAN3
<b>12V halogen</b>				
H4 RGT BF	56865BF	00596030	8719018005960	8719018005977
H7 RGT BF	56866BF	00598430	8719018005984	8719018005991
H4 RGT SF	56873SF	00606628	8719018006066	8719018006073
H7 RGT SF	56874SF	00608028	8719018006080	8719018006097
H1 XVP BF	56859BF	00584730	8719018005847	8719018005854
H4 XVP BF	56860BF	00586130	8719018005861	8719018005878
H7 XVP BF	56861BF	00588530	8719018005885	8719018005892
H1 XVP SF	56862SF	00590828	8719018005908	8719018005915
H4 XVP SF	56863SF	00592228	8719018005922	8719018005939
H7 XVP SF	56864SF	00594630	8719018005946	8719018005953
H1 WVU BF	56869BF	00600430	8719018006004	8719018006011
H4 WVU BF	56870BF	00602830	8719018006028	8719018006035
H7 WVU BF	56871BF	00604230	8719018006042	8719018006059
H1 WVU SF	56875SF	00610328	8719018006103	8719018006110
H4 WVU SF	56876SF	00612728	8719018006127	8719018006134
H7 WVU SF	56877SF	00614128	8719018006141	8719018006158
H1 LLECO BF	56273BF	26939830	8718696269398	8718696269404
H4 LLECO BF	56270BF	26933630	8718696269336	8718696269343
H7 LLECO BF	56268BF	26927530	8718696269275	8718696269282
H4 LLECO SF	56292SF	39002528	8727900390025	8727900390032
H1 LLECO SF	56261SF	26909128	8718696269091	8718696269107
H7 LLECO SF	56294SF	39004928	8727900390049	8727900390056
H1 VP BF	56279BF	26949730	8718696269497	8718696269503
H4 VP BF	56278BF	26947330	8718696269473	8718696269480
H7 VP BF	56277BF	26945930	8718696269459	8718696269466
H1 VP SF	56252SF	39991228	8727900399912	8727900399929
H4 VP SF	56293SF	39010028	8727900390100	8727900390117
H7 VP SF	56295SF	39012428	8727900390124	8727900390131


Description	Ordering number	GOC	EAN1	EAN3
<b>Xenon</b>				
D1S XV2 SF	56643SF	39655333	8727900396553	8727900396560
D2S XV2 SF	56644SF	39657733	8727900396577	8727900396584
D2R XV2 SF	56645SF	39659133	8727900396591	8727900396607
D3S XV2 SF	56646SF	39661433	8727900396614	8727900396621
D4S XV2 SF	56647SF	39663833	8727900396638	8727900396645
D1S WHV2 SF	56640SF	39649233	8727900396492	8727900396508
D2S WHV2 SF	56641SF	39651533	8727900396515	8727900396522
D3S WHV2 SF	56642SF	39653933	8727900396539	8727900396546
D1S SY SF	56477SF	39467233	8727900394672	8727900394689
D2S SY SF	56478SF	39469633	8727900394696	8727900394689
D2R SY SF	56479SF	39470233	8727900394702	8727900394719
D1S VI SF	85415VISF	36504733	8727900365047	8727900365054
D2R VI SF	85126VISF	36511533	8727900365115	8727900365122
D2S VI SF	85122VISF	36507833	8727900365078	8727900365085
D3S VI SF	42403VISF	36515333	8727900365153	8727900365160

# Understanding Philips ordering codes

All our automotive lighting products can be ordered using **Philips Order Entry**.

With Philips Order Entry you can identify the **lamp type**, the **product range** and the **packaging type**.

Example: **12972WVUB1**, H7 WhiteVision ultra, single blister

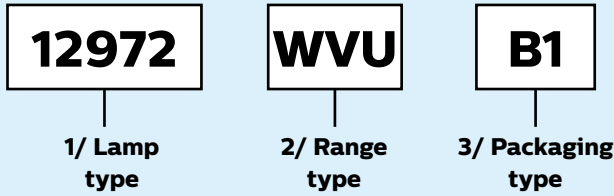

## 1/ Lamp type

Every **lamp type** is designated by Philips with a unique number called lamp type.

- All 12V lamps start with 12 (for example: 12972 for H7 12V)
- All 24V lamps starting with 13 (for example: 13972 for H7 24V)

## 2/ Range type

Most lamp types are available in different product **ranges**. These are indicated by a **color code**, to indicate the availability of a lamp in a specific product range.

### Color code

	<b>RacingVision GT200</b> Up to 200% brighter light	Range type <b>RGT</b>
	<b>X-tremeVision Pro150</b> Up to 150% brighter light	Range type <b>XVP</b>
	<b>VisionPlus</b> Up to 60% more vision	Range type <b>VP</b>
	<b>LongLife EcoVision</b> Lifetime up to 1,500 hours	Range type <b>LLECO</b>
	<b>WhiteVision ultra</b> Sharp white look	Range type <b>WVU</b>
	<b>Vision</b> Up to 30% more vision	Range type <b>PR</b>
	<b>Standard</b>	Range type <b>STD</b>

## 3/ Packaging type



**Commercial pack**  
Material carton  
Contents **C1** 1 lamp  
Contents **CP** 10 lamps  
Packaging type **C1/CP**



**Single blister**  
Material carton/plastic  
Contents 1 lamp  
Packaging type **B1**



**Double blister**  
Material carton/plastic  
Contents 2 lamps  
Packaging type **B2**



**Special pack**  
Material plastic  
Contents **S2** 2 lamps  
Contents **SM** 4 lamps  
(2 headlamps,  
2 position lamps)  
Packaging type **S2/SM**


































































**Xenon single blister**  
Material carton/plastic  
Contents 1 lamp  
Packaging type **S1**



**LED X1/X2 blister**  
Material carton/plastic  
Contents **X1** 1 lamp  
Contents **X2** 2 lamps  
Packaging types **X1/X2**

	<b>Ultinon Pro9000</b> Original automotive performance in LED	Range type <b>U90</b>
	<b>Ultinon Pro5000</b> The perfect blend of performance and durability	Range type <b>U50</b>
	<b>Ultinon Essential</b> Stand out from the crowd	Range type <b>UE</b>
	<b>Ultinon Pro6000</b> Brighter, elegant signals	Range type <b>U60</b>
	<b>Ultinon Pro3000</b> Stand out from the crowd	Range type <b>U30</b>

# Technical illustrations Bases

						
<b>SV6</b> IEC 7004-5	<b>SV8,5-8</b> IEC 7004-81	<b>W2x4,6d</b> IEC 7004-94	<b>W2,1x9,5d</b> IEC 7004-91	<b>W3x16d</b> IEC 7004-105	<b>W3x16q</b> IEC 7004-106	<b>WX3x16d</b> IEC 7004-105
						
<b>BAX 9s</b> IEC 7004-8	<b>BAY 9s</b> IEC 7004-9	<b>BA 7s</b>	<b>BA 9s</b> IEC 7004-14	<b>BA 15s</b> IEC 7004-11A	<b>BA 15d</b> IEC 7004-11A	<b>BAU 15s</b> IEC 7004-11A
						
<b>BAY 15d</b> IEC 7004-11B	<b>BAW 9s</b> IEC 7004-149-1	<b>BAW 15d</b> IEC 7004-11E-1	<b>BAW 15s</b> IEC 7004-11E11	<b>BAZ 15d</b> IEC 7004-11C	<b>BA20d</b> IEC 7004-12	<b>P43t-38</b> IEC 7004-39
						
<b>P45t-41</b> IEC 7004-95	<b>P20d-PY20d</b> IEC 7004-31	<b>P22d</b> IEC 7004-32	<b>PX22d</b>	<b>PG13</b> IEC 7004-107	<b>PGJ13</b> IEC 7004-107	<b>PGJ23t-1</b>
						
<b>HPSL HTR</b>	<b>PG18,5d</b> IEC 7004-147	<b>PG20</b> IEC 7004-127	<b>PGU20</b>	<b>PU20d</b>	<b>PGJ19-1/2</b> IEC 7004-110	<b>PGJ19-3</b> IEC 7004-110
						
<b>PGJ19-5</b> IEC 7004-110	<b>PGJ23t-1</b>	<b>P14,5s</b> IEC 7004-46	<b>X511</b> IEC 7004-99	<b>P26s</b>	<b>PX26d,4t</b> IEC 7004-128-2	<b>PX26d</b> IEC 7004-5
						
<b>P29t-PX29t</b> IEC 7004-66	<b>P32d</b> IEC 7004-111	<b>P32d-2</b> IEC 7004-111	<b>P32d-3</b> IEC 7004-111	<b>P32d-5</b> IEC 7004-111	<b>P32d-6</b> IEC 7004-111	<b>PK32d-2</b> IEC 7004-111
						
<b>PK32d-3/5/6</b> IEC 7004-111	<b>PK32d-7</b> IEC 7004-111	<b>PK22s</b> IEC 7004-47	<b>PU43t-3</b> IEC 7004-171-2	<b>PY26d-1</b> IEC 7004-5-7	<b>W3x16d</b> IEC 7004-105-1	<b>W3x16q</b> IEC 7004-106-1
						
<b>W2,1x9,5d</b>	<b>WP3,3x14,5/3</b>	<b>Bax 8,3s</b>	<b>Bax 8,4d</b>	<b>Bax 8,5d/1</b>	<b>Bax 8,5d/2</b>	<b>Bax 10d</b>



# Product index

## Halogen 12 V car lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
12023CP	H5W	Standard	12	5	BA9s	51270928	8711559512709	8711559512464	8727900371222	26
12024CP	H10W	Standard	12	10	BA9s	52941728	8711559529417	8711559529424	8727900371192	26
12025CP	H20W	Standard	12	20	BA9s	87600328	8711500876003	8711500876010	8727900371154	26
12036B2	H6W	Standard	12	6	BAX9s	24720930	8711500247209	-	8711500247216	26
12036CP	H6W	Standard	12	6	BAX9s	87603428	8711500876034	8711500876041	8727900370676	26
12036WVUB2	H6W	WhiteVision ultra	12	6	BAX9s	00543430	8719018005434	-	8719018005441	26
12040VPB2	WBT10	VisionPlus	12	6	W2,1x9,5d	52416030	8711559524160	-	8711559524184	28
12059C1	H27W/1	Standard	12	27	PG13	52854030	8711559528540	-	8727900370799	23
12060C1	H27W/2	Standard	12	27	PGJ13	52857130	8711559528571	-	8727900370805	23
12061CP	W2,3W	Standard	12	2.3	W2x4,6d	48330028	8711500483300	8711500483317	8727900391640	27
12065B2	W21W	Standard	12	21	W3x16d	70146330	8727900701463	-	8727900701470	28
12065CP	W21W	Standard	12	21	W3x16d	47135228	8711500471352	8711500471369	8727900391107	28
12066B2	W21/5W	Standard	12	21/5	W3x16q	69739130	8727900697391	-	8727900697407	28
12066CP	W21/5W	Standard	12	21/5	W3x16q	47138328	8711500471383	8711500471390	8727900391091	28
12067B2	W16W	Standard	12	16	W2,1x9,5d	40587630	8711500405876	-	8711559521053	28
12067CP	W16W	Standard	12	16	W2,1x9,5d	48272328	8711500482723	8711500482730	8727900391626	28
12071B2	WY21W	Standard	12	21	WX3x16d	69741430	8727900697414	-	8727900697421	28
12071CP	WY21W	Standard	12	21	WX3x16d	52539628	8711559525396	8711559525402	8727900391688	28
12085C1	PS19W	Standard	12	19	PG20/1	69653030	8727900696530	-	8727900390988	32
12085LLC1	PS19W	LongLife	12	19	PG20/1	70046630	8727900700466	-	8727900390926	32
12086FFC1	PS24W	Standard	12	24	PG20/3	70044230	8727900700442	-	8727900390919	32
12088CP	PR21W	Standard	12	21	BAW15s	48531128	8711500485311	8711500485328	8727900391589	24
12093NACP	RY10W	Standard	12	10	BAU15s	48362128	8711500483621	8711500483638	8727900391619	25
12146CP	HY21W	Standard	12	21	BAW9s	35244328	8727900352443	8727900352450	8727900370867	26
12174NAHTRC1	PWY24W	Standard	12	24	WP3,3x14,5/4	39202930	8727900392029	-	8727900397345	33
12174SVHTRC1	PWY24W	SilverVision+	12	24	WP3,3x14,5/4	39200530	8727900392005	-	8727900397352	33
12177C1	PW16W	Standard	12	16	WP3,3x14,5/8	39623230	8727900396232	-	8727900396249	32
12180SV+C1	PSY24W	SilverVision+	12	24	PG20/4	70379530	8727900703795	-	8727900390841	33
12182HTRC1	PW24W	Standard	12	24	WP3,3x14,5/3	39196130	8727900391961	-	8727900397369	33
12188NAC1	PSY24W	Standard	12	24	PG20/4	69668430	8727900696684	-	8727900390834	33
12190NAC1	PY24W	Standard	12	24	PGU20/4	69690530	8727900696905	-	8727900390803	33
12197HTRC1	HiPerVision LCP	Standard	13.5	24	HPSL 2A	39621830	8727900396218	-	8727900396225	32
12256B2	W3W	Standard	12	3	W2,1x9,5d	52410830	8711559524108	-	8711559524122	27
12256CP	W3W	Standard	12	3	W2,1x9,5d	48144328	8711500481443	8711500481450	8727900391664	27
12258LLECOB1	H1	LongLife EcoVision	12	55	P14,5s	36196430	8727900361964	-	8727900361971	18
12258LLECO1	H1	LongLife EcoVision	12	55	P14,5s	36187230	8727900361872	-	8727900370683	18
12258LLECOS2	H1	LongLife EcoVision	12	55	P14,5s	36255828	8727900362558	-	8727900362565	18
12258PRB1	H1	Vision	12	55	P14,5s	47516930	8711500475169	-	8711500475176	18
12258PRC1	H1	Vision	12	55	P14,5s	47518360	8711500475183	8727900363791	8711500475190	18
12258SPC1	H1	Spot	12	55	P14,5s	40460230	8711500404602	-	8727900370690	18
12258VPB1	H1	VisionPlus	12	55	P14,5s	36320330	8727900363203	-	8727900363197	18
12258VPS2	H1	VisionPlus	12	55	P14,5s	36322728	8727900363227	-	8727900363210	18
12258WVUB1	H1	WhiteVision ultra	12	55	P14,5s	00523630	8719018005236	-	8719018005243	18
12258WVUSM	H1	WhiteVision ultra	12	55	P14,5s	00525028	8719018005250	-	8719018005267	18
12258XVPB1	H1	X-tremeVision Pro150	12	55	P14,5s	00549630	8719018005496	-	8719018005502	18
12258XVPS2	H1	X-tremeVision Pro150	12	55	P14,5s	00565628	8719018005656	-	8719018005663	18
12271AC1	PCY16W	HiPerClick	12	16	PU20d/2	38965430	8727900389654	-	8727900391152	32
12274SV+C1	PY24	SilverVision+	12	24	PGU20/4	69678330	8727900696783	-	8727900390780	33
12275NAC1	PSY19W	Standard	12	19	PG20/2	52735230	8711559527352	-	8727900390858	32
12276C1	PSX24W	Standard	12	24	PG20/7	69676930	8727900696769	-	8727900390902	32
12276WVUB1	PSX24W	WhiteVision ultra	12	24	PG20/7	00545828	8719018005458	-	8719018005465	32
12277C1	P13W	Standard	12	13	PG18,5d-1	69672130	8727900696721	-	8727900391008	32
12278C1	PSX26W	Standard	12	26	PG18,5d/3	38874930	8727900388749	-	8727900390896	33
12311C1	H2	Standard	12	55	X511	47752130	8711500477521	-	8727900370782	18
12336LLECO1	H3	LongLife EcoVision	12	55	PK22s	77704130	8711500777041	-	8711500779366	19
12336PRB1	H3	Vision	12	55	PK22s	69561130	8711500695611	-	8711500695628	18
12336PRC1	H3	Vision	12	55	PK22s	69534560	8711500695345	8711500775696	8711500695352	18
12336WVUB1	H3	WhiteVision ultra	12	55	PK22s	00531128	8719018005311	-	8719018005328	19
12342LLECOB1	H4	LongLife EcoVision	12	60/55	P43t-38	36198830	8727900361988	-	8727900361995	19
12342LLECO1	H4	LongLife EcoVision	12	60/55	P43t-38	36189630	8727900361896	-	8727900370836	19
12342LLECOS2	H4	LongLife EcoVision	12	60/55	P43t-38	36257228	8727900362572	-	8727900362589	19
12342PRB1	H4	Vision	12	60/55	P43t-38	47480330	8711500474803	-	8711500474810	19

## Halogen 12 V car lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
12342PRC1	H4	Vision	12	60/55	P43t-38	49099560	8711500490995	8711500827807	8711500490988	19
12342PRC2	H4	Vision	12	60/55	P43t-38	78028760	8711500780287	8711500780294	8711500780300	19
12342RGTB1	H4	RacingVision GT200	12	60/55	P43t-38	00571730	8719018005717	-	8719018005724	19
12342RGTS2	H4	RacingVision GT200	12	60/55	P43t-38	00575528	8719018005755	-	8719018005762	19
12342VPB1	H4	VisionPlus	12	60/55	P43t-38	39934930	8727900399349	-	8727900399332	19
12342VPC2	H4	VisionPlus	12	60/55	P43t-38	37435360	8727900374353	8727900374360	8727900374377	19
12342VPS2	H4	VisionPlus	12	60/55	P43t-38	39925728	8727900399257	-	8727900350937	19
12342WVUB1	H4	WhiteVision ultra	12	60/55	P43t-38	35489830	8727900354898	-	8727900354881	19
12342WVUSM	H4	WhiteVision ultra	12	60/55	P43t-38	35490428	8727900354904	-	8727900354911	19
12342XVPB1	H4	X-tremeVision Pro150	12	60/55	P43t-38	00553330	8719018005533	-	8719018005540	19
12342XVPS2	H4	X-tremeVision Pro150	12	60/55	P43t-38	00567028	8719018005670	-	8719018005687	19
12356CP	H21W	Standard	12	21	BAY9s	87989928	8711500879899	8711500879905	8727900371116	26
12360B1	H8	Standard	12	35	PGJ19-1	82416530	8711500824165	-	8727900362909	20
12360C1	H8	Standard	12	35	PGJ19-1	47582430	8711500475824	-	8727900371017	20
12360WVUB1	H8	WhiteVision ultra	12	35	PGJ19-1	00533528	8719018005335	-	8719018005342	20
12361B1	H9	Standard	12	65	PGJ19-5	36308130	8727900363081	-	8727900363098	21
12361C1	H9	Standard	12	65	PGJ19-5	47584830	8711500475848	-	8727900371000	21
12362XVPB1	H11	X-tremeVision Pro150	12	55	PGJ19-2	00551928	8719018005519	-	8719018005526	21
12362LLECOB1	H11	LongLife EcoVision	12	55	PGJ19-2	36310430	8727900363104	-	8727900363111	21
12362LLECO1	H11	LongLife EcoVision	12	55	PGJ19-2	36194030	8727900361940	-	8727900370744	21
12362PRB1	H11	Vision	12	55	PGJ19-2	36428630	8727900364286	-	8727900364293	21
12362PRC1	H11	Vision	12	55	PGJ19-2	36430930	8727900364309	-	8727900370751	21
12362WVUB1	H11	WhiteVision ultra	12	55	PGJ19-2	00535928	8719018005359	-	8719018005366	21
12366C1	H16	Standard	12	19	PGJ19-3	36856730	8727900368567	-	8727900370775	21
12396NAB2	WY5W	Standard	12	5	W2,1x9,5d	40058130	8711500400581	-	8711500400598	27
12396NACP	WY5W	Standard	12	5	W2,1x9,5d	53002428	8711559530024	8711559530031	8727900390889	27
12401CP	Stop P22	Standard	12	15	BA15s	87821228	8711500878212	8711500878229	8711500790538	24
12445CP	Stop P25	Standard	12	18	BA15s	48440628	8711500484406	8711500484413	8727900391602	25
12475B1	R2	R2 Visio	12	45/40	P45t-41	24716230	8711500247162	-	8711500247179	23
12475C1	R2	R2 Visio	12	45/40	P45t-41	40466430	8711500404664	-	8727900371130	23
12495CP	PR21/5W	Standard	12	21/5	BAW15d	48873228	8711500488732	8711500488749	8727900391572	24
12496LLECOCP	PY21W	LongLife EcoVision	12	21	BAU15s	38218128	8727900382181	8727900382198	8727900391084	24
12496NAB2	PY21W	Standard	12	21	BAU15s	52372930	8711559523729	-	8711559523743	24
12496NACP	PY21W	Standard	12	21	BAU15s	52534173	8711559525341	8711559525358	8711559525365	24
12496SVB2	PY21W	SilverVision	12	21	BAU15s	31117730	8711500311177	-	8711500311191	24
12498B2	P21W	Standard	12	21	BA15s	5549130	8711500055491	-	8711559520131	23
12498CP	P21W	Standard	12	21	BA15s	49078073	8711500490780	8711500490797	8711500490803	23
12498LLECOB2	P21W	LongLife EcoVision	12	21	BA15s	38210530	8727900382105	-	8727900382112	23
12498LLECOCP	P21W	LongLife EcoVision	12	21	BA15s	38198628	8727900381986	8727900381993	8727900391695	23
12498VPB2	P21W	VisionPlus	12	21	BA15s	36318030	8727900363180	-	8727900363173	23
12499B2	P21/5W	Standard	12	21/5	BAY15d	5545330	8711500055453	-	8711559520148	24
12499CP	P21/5W	Standard	12	21/5	BAY15d	48159773	8711500481597	8711500481603	8711500481610	24
12499LLECOB2	P21/5W	LongLife Ecovision	12	21/5	BAY15d	38212930	8727900382129	-	8727900382136	24
12499LLECOCP	P21/5W	LongLife Ecovision	12	21/5	BAY15d	38201328	8727900382013	8727900382020	8727900391053	24
12499VPB2	P21/5W	VisionPlus	12	21/5	BAY15d	36316630	8727900363166	-	8727900363159	24
12505CP	W2W	Standard	12	2	W2x4,6d	48327028	8711500483270	8711500483287	8727900391657	27
12516B2	W1,2W	Standard	12	1.2	W2x4,6d	5554530	8711500055545	-	8711500417763	27
12516CP	W1,2W	Standard	12	1.2	W2x4,6d	48153573	8711500481535	8711500481542	8711500481559	27
12521CP	WBT5	Standard	12	1	W2x4,6d	48321828	8711500483218	8711500483225	8727900391671	27
12580C1	H15	Standard	12	55/15	PGJ23t-1	02000030	8719018020000	-	8719018020024	21
12580B1	H15	Standard	12	55/15	PGJ23t-1	02001730	8719018020017	-	8719018020031	21
12594B2	P21/4W	Standard	12	21/4	BAZ15d	40485530	8711500404855	-	8711500471017	24
12594CP	P21/4W	Standard	12	21/4	BAZ15d	48433828	8711500484338	8711500484345	8727900391565	24
12597B2	Bax 8,3s/1,35 black	Standard	12	1.2	B8,3s/1,35	53018530	8711559530185	-	8711559530192	30
12597CP	Bax 8,3s/1,35 black	Standard	12	1.2	B8,3s/1,35	48365228	8711500483652	8711500483669	8727900390957	30
12598B2	Bax 8,5d/2 black	Standard	12	1.2	B8,5d/2	40588330	8711500405883	-	8711500405890	30
12598CP	Bax 8,5d/2 black	Standard	12	1.2	B8,5d/2	48387428	8711500483874	8711500483881	8727900390964	30
12600CP	Bax 8,5d/2 green	Standard	12	2	B8,5d/2	48393528	8711500483935	8711500483942	8727900390971	30
12602CP	Bax 8,3s/1,5 blue	Standard	12	2	B8,3s/1,5	48396628	8711500483966	8711500483973	8727900390995	30
12603CP	Bax 8,5d/1,5 blue	Standard	12	1.2	B8,5d/1,5	48399728	8711500483997	8711500484000	8727900391015	30
12604CP	B8,5d green	Standard	12	2	B8,5d	40508128	8711500405081	8711500404589	8727900391022	30
12611CP	BX8,4d olive green	Standard	12	1.3	BX8,4d	77432328	8711500774323	8711500774330	8711500779397	31
12614CP	B10d brown halogen	Standard	12	3	B10d	52805228	8711559528052	8711559512723	8727900370928	30
12615CP	B10d black halogen	Standard	12	5	B10d	52807628	8711559528076	8711500243768	8727900370911	30
12620B1	R2	Standard	12	45/40	P45t-41	5543930	8711500055439	-	8711559525327	23

## Halogen 12 V car lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
12620C1	R2	Standard	12	45/40	P45t-41	40085730	8711500400857	-	8711500779359	23
12623CP	BX8,4d light blue	Standard	12	1.2	BX8,4d	51384328	8711559513843	8711500244154	8727900370904	30
12624CP	BX8,4d orange	Standard	12	1.1	BX8,4d	51411628	8711559514116	8711500245137	8727900370898	31
12625CP	BX8,4d black	Standard	12	1.2	BX8,4d	51409328	8711559514093	8711500244420	8727900371208	31
12626CP	BX8,4d light green	Standard	12	2	BX8,4d	51412328	8711559514123	8711500246066	8727900370942	31
12627CP	BX8,4d beige	Standard	12	1.5	BX8,4d	51414728	8711559514147	8711500247414	8727900370959	31
12629CP	BX8,4d beige	Standard	12	1.8	BX8,4d	51488828	8711559514888	8711559512488	8727900371031	31
12637CP	B8,5d beige	Standard	12	1.5	B8,5d	51487128	8711559514871	8711500400178	8727900371048	30
12638CP	BX8,5d white	Standard	12	1.12	BX8,5d	48846628	8711500488466	8711500488473	8727900391503	31
12643LLC1	H18	LongLife EcoVision	12	65	PY26d-1	35603830	8727900356038	-	8727900356045	21
12644LLC1	H19	LongLife EcoVision	12	60/55	PU43t-3	35605230	8727900356052	-	8727900356069	22
12814B2	R10W	Standard	12	10	BA15s	5547730	8711500055477	-	8711500417718	25
12814CP	R10W	Standard	12	10	BA15s	48341673	8711500483416	8711500483423	8711500483430	25
12818CP	Festoon T6,2x27	Standard	12	3	SV6	48461128	8711500484611	8711500484628	8727900695632	29
12821B2	R5W BA15s	Standard	12	5	BA15s	5546030	8711500055460	-	8711500417701	25
12821CP	R5W BA15s	Standard	12	5	BA15s	48269373	8711500482693	8711500482709	8711500482716	25
12821LLECOB2	R5W	LongLife EcoVision	12	5	BA15s	38208230	8727900382082	-	8727900382099	25
12821LLECOCP	R5W	LongLife EcoVision	12	5	BA15s	38195528	8727900381955	8727900381962	8727900390940	25
12822CP	R5W BA15d	Standard	12	5	BA15d	45407228	8711500454072	8711500454959	8711500790521	25
12829CP	BA7	Standard	12	2	BA7s	52123728	8711559521237	8711500401236	8727900390933	25
12844B2	Festoon C5W	Standard	12	5	SV8,5	5551430	8711500055514	-	8711500417749	27
12844CP	Festoon C5W	Standard	12	5	SV8,5	48156673	8711500481566	8711500481573	8711500481580	29
12848CP	Festoon T6,2x35	Standard	12	3	SV6	48467328	8711500484673	8711500484680	8727900391558	29
12850CP	Festoon T15x43	Standard	12	15	SV8,5	48285328	8711500482853	8711500482860	8727900391541	29
12854CP	Festoon T10,5x38	Standard	12	10	SV8,5	48248828	8711500482488	8711500482495	8727900391510	29
12860LLECOCP	Festoon T10,5x30	LongLife EcoVision	12	10	SV8,5	38192428	8727900381924	8727900381931	8727900391114	29
12864CP	Festoon T10,5x43	Standard	12	5	SV8,5	48205128	8711500482051	8711500482075	8727900391527	29
12866B2	Festoon T10,5x43	Standard	12	10	SV8,5	5552130	8711500055521	-	8711500417756	29
12866CP	Festoon T10,5x43	Standard	12	10	SV8,5	48242628	8711500482426	8711500482433	8727900391534	29
12910CP	T3W	Standard	12	3	BA9s	21949728	8711500219497	8711500219503	8711500220837	25
12913CP	T2W	Standard	12	2	BA9s	21997828	8711500219978	8711500219985	8711500220820	25
12929B2	T4W	Standard	12	4	BA9s	5550730	8711500055507	-	8711559520094	25
12929CP	T4W	Standard	12	4	BA9s	21979473	8711500219794	8711500219800	8711500219817	25
12960CP	W2,2W	Standard	12	2.2	W2,1x9,5d	48150428	8711500481504	8711500481511	8727900391633	27
12961B2	W5W	Standard	12	5	W2,1x9,5d	40421330	8711500404213	-	8711559520070	27
12961CP	W5W	Standard	12	5	W2,1x9,5d	49090273	8711500490902	8711500490919	8711500490926	27
12961LLECOB2	W5W	LongLife EcoVision	12	5	W2,1x9,5d	38204430	8727900382044	-	8727900382051	27
12961LLECOCP	W5W	LongLife EcoVision	12	5	W2,1x9,5d	38189428	8727900381894	8727900381900	8727900390872	27
12961WVUB2	W5W	WhiteVision ultra	12	5	W2,1x9,5d	35484330	8727900354843	-	8727900354874	27
12961XVPB2	W5W	X-tremeVision Pro150	12	5	W2,1x9,5d	00563230	8719018005632	-	8719018005649	27
12972LLECOB1	H7	LongLife EcoVision	12	55	PX26d	36200830	8727900362008	-	8727900362015	20
12972LLECOB1	H7	LongLife EcoVision	12	55	PX26d	36192630	8727900361926	-	8727900371024	20
12972LLECOS2	H7	LongLife EcoVision	12	55	PX26d	36259628	8727900362596	-	8727900362602	20
12972PRB1	H7	Vision	12	55	PX26d	40607130	8711500406071	-	8711500406088	20
12972PRC1	H7	Vision	12	55	PX26d	40593760	8711500405937	8711500827838	8711500405944	20
12972PRC2	H7	Vision	12	55	PX26d	37432260	8727900374322	8727900374339	8727900374346	20
12972RGTB1	H7	RacingVision GT200	12	55	PX26d	00573130	8719018005731	-	8719018005748	20
12972RGTB2	H7	RacingVision GT200	12	55	PX26d	00577928	8719018005779	-	8719018005786	20
12972VPB1	H7	VisionPlus	12	55	PX26d	39936330	8727900399363	-	8727900399356	20
12972VPC2	H7	VisionPlus	12	55	PX26d	37426160	8727900374261	8727900374278	8727900374285	20
12972VPS2	H7	VisionPlus	12	55	PX26d	39938728	8727900399387	-	8727900399370	20
12972WVUB1	H7	WhiteVision ultra	12	55	PX26d	35493530	8727900354935	-	8727900354928	20
12972WVUSM	H7	WhiteVision ultra	12	55	PX26d	35495928	8727900354959	-	8727900354942	20
12972XVPB1	H7	X-tremeVision Pro150	12	55	PX26d	00555730	8719018005557	-	8719018005564	20
12972XVPS2	H7	X-tremeVision Pro150	12	55	PX26d	00569428	8719018005694	-	8719018005700	20
9004C1	HB1	Standard	12	65/45	P29t	47074430	8711500470744	-	8727900370997	22
9005PRB1	HB3	Vision	12	60	P20d	24724730	8711500247247	-	8711500247254	22
9005PRC1	HB3	Vision	12	60	P20d	24689930	8711500246899	-	8727900370980	22
9005XVPB1	HB3	X-tremeVision Pro150	12	60	P20d	00557128	8719018005571	-	8719018005588	22
9005WVUB1	HB3	WhiteVision ultra	12	60	P20d	00537328	8719018005373	-	8719018005380	22
9006PRB1	HB4	Vision	12	51	P22d	24726130	8711500247261	-	8711500247278	22
9006PRC1	HB4	Vision	12	51	P22d	24687530	8711500246875	-	8727900370973	22
9006XVPB1	HB4	X-tremeVision Pro150	12	51	P22d	00559528	8719018005595	-	8719018005601	22
9006WVUB1	HB4	WhiteVision ultra	12	51	P22d	00539728	8719018005397	-	8719018005403	22
9007C1	HB5	Standard	12	65/55	PX29t	24550230	8711500245502	-	8727900370966	22

## Halogen 12 V car lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
9008C1	H13	Standard	12	60/55	P26,4t	87798730	8711500877987	-	8727900370768	21
9012LLC1	HIR2	LongLife	12	55	PX22d	35125530	8727900351255	-	8727900370935	22
9012WVUB1	HIR2	WhiteVision ultra	12	55	PX22d	00541028	8719018005410	-	8719018005427	23
9012XVPB1	HIR2	X-tremeVision Pro150	12	55	PX22d	00561828	8719018005618	-	8719018005625	23
9145C1	H10	Standard	12	45	PY20d	52974530	8711559529745	-	8727900370737	21

## Halogen two-wheeler lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
12008BW	S3	Standard	12	15	P26s	77381430	8711500773814	-	8711500773845	41
12008C1	S3	Standard	12	15	P26s	77394430	8711500773944	-	8711500779335	41
12256B2	W3W	Standard	12	3	W2,1x9,5d	52410830	8711559524108	-	8711559524122	41
12256CP	W3W	Standard	12	3	W2,1x9,5d	48144328	8711500481443	8711500481450	8727900391664	41
12342CTVBW	H4	CityVision moto	12	60/55	P43t-38	39896030	8727900398960	-	8727900398977	40
12342PRBW	H4	Vision moto	12	60/55	P43t-38	49024730	8711500490247	-	8711500490254	40
12498B2	P21W	Standard	12	21	BA15s	05549130	8711500055491	-	8711559520131	41
12498CP	P21W	Standard	12	21	BA15s	49078073	8711500490780	8711500490797	8711500490803	41
12499B2	P21/5W	Standard	12	21/5	BAY15d	05545330	8711500055453	-	8711559520148	41
12636BW	HS1	Vision moto	12	35/35	PX43t	53035330	8727900530353	-	8727900530360	40
12636C1	HS1	Vision moto	12	35/35	PX43t	51250130	8711559512501	-	8727900370881	40
12636CTVBW	HS1	CityVision moto	12	35/35	PX43t	39894630	8727900398946	-	8727900398953	41
12728BW	S2	Standard	12	35/35	BA20d	77385230	8711500773852	-	8711500773869	41
12728C1	S2	Standard	12	35/35	BA20d	77359330	8711500773593	-	8711500779342	41
12972CTVBW	H7	CityVision moto	12	55	PX26d	39898430	8727900398984	-	8727900398991	40
12972PRBW	H7	Vision moto	12	55	PX26d	49026130	8711500490261	-	8711500490278	40
12342XV+BW	H4	X-tremeVision moto	12	60/55	P43t-38	00056930	8719018000569	-	8719018000576	40
12972XV+BW	H7	X-tremeVision moto	12	55	PX26d	37867230	8727900378672	-	8727900378689	40
12342CVUBW	H4	CrystalVision ultra moto	12	60/55	P43t-38	22148330	8711500221483	-	8711500221490	40
12972CVUBW	H7	CrystalVision ultra moto	12	55	PX26d	22118630	8711500221186	-	8711500221193	40
12636BVBW	HS1	CrystalVision ultra moto	12	35/35	PX43t	78195630	8711500781956	-	8711500781963	41

## Halogen 24 V lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
13256CP	W3W	Standard	24	3	W2,1x9,5d	48141228	8711500481412	8711500481429	8727900391169	52
13258MDB1	H1	MasterDuty	24	70	P14,5s	82585830	8711500825858	-	8711500825865	48
13258MDC1	H1	MasterDuty	24	70	P14,5s	82577360	8711500825773	8711500828507	8711500825780	48
13258MLC1	H1	MasterLife	24	70	P14,5s	82569830	8711500825698	-	8727900370812	48
13311C1	H2	Standard	24	70	X511	47751430	8711500477514	-	8727900371079	48
13336MDB1	H3	MasterDuty	24	70	PK22s	77459030	8711500774590	-	8711500774613	48
13336MDBVB1	H3	MasterDuty BlueVision	24	70	PK22s	77488030	8711500774880	-	8711500774910	48
13336MDBVS2	H3	MasterDuty BlueVision	24	70	PK22s	77486628	8711500774866	-	8711500774897	48
13336MDC1	H3	MasterDuty	24	70	PK22s	77460660	8711500774606	8711500775313	8711500774637	48
13336MLC1	H3	MasterLife	24	70	PK22s	77462030	8711500774620	-	8711500779403	48
13342MDB1	H4	MasterDuty	24	75/70	P43t-38	82587230	8711500825872	-	8711500825889	48
13342MDBVB1	H4	MasterDuty BlueVision	24	75/70	P43t-38	53281430	8727900532814	-	8727900532821	48
13342MDBVS2	H4	MasterDuty BlueVision	24	75/70	P43t-38	53275328	8727900532753	-	8727900532760	48
13342MDC1	H4	MasterDuty	24	75/70	P43t-38	82579760	8711500825797	8711500828002	8711500825803	48
13342MLC1	H4	MasterLife	24	75/70	P43t-38	82571130	8711500825711	-	8727900371086	48
13401CP	Stop P22	Standard	24	15	BA15s	87826728	8711500878267	8711500878274	8711500790507	50
13402CP	Stop P22	Standard	24	15	BA15d	87836628	8711500878366	8711500878373	8711500790514	50
13445CP	Stop P25	Standard	24	18	BA15s	48443728	8711500484437	8711500484444	8727900390810	50
13496MLCP	PY21W	MasterLife	24	21	BAU15s	69964728	8727900699647	8727900699654	8727900391138	50
13498B2	P21W	Standard	24	21	BA15s	40455830	8711500404558	-	8711500405449	50
13498CP	P21W	Standard	24	21	BA15s	48415473	8711500484154	8711500484161	8711500484178	50
13498MDCP	P21W	MasterDuty	24	21	BA15s	69949473	8727900699494	8727900699500	8727900699517	49
13498MLCP	P21W	MasterLife	24	21	BA15s	69961628	8727900699616	8727900699623	8727900391145	49
13499B2	P21/5W	Standard	24	21/5	BAY15d	40456530	8711500404565	-	8711500405371	50
13499CP	P21/5W	Standard	24	21/5	BAY15d	48424673	8711500484246	8711500484253	8711500484260	50
13516CP	WBT5	Standard	24	1.2	W2x4,6d	48306573	8711500483065	8711500483072	8711500483089	52
13521CP	WBT5	Standard	24	1	W2x4,6d	48324928	8711500483249	8711500483256	8727900391176	52
13597CP	Bax 8,3s/1,35 grey	Standard	24	1.2	B8,3s/1,35	48384328	8711500483843	8711500483850	8727900390797	53
13598CP	Bax 8,5d/2 grey	Standard	24	1.2	B8,5d/2	48390428	8711500483904	8711500483911	8727900390827	53
13620C1	R2	Standard	24	55/50	P45t-41	40087130	8711500400871	-	8711500779458	49
13807CP	Festoon T15x43	Standard	24	18	SV8,5	48294528	8711500482945	8711500482952	8727900391237	53
13814B2	R10W	Standard	24	10	BA15s	40452730	8711500404527	-	8711559526409	51
13814CP	R10W	Standard	24	10	BA15s	48344773	8711500483447	8711500483454	8711500483461	51

## Halogen 24 V lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
13814MDCP	R10W	MasterDuty	24	10	BA15s	69952428	8727900699524	8727900699531	8727900391121	50
13814MLCP	R10W	MasterLife	24	10	BA15s	69967828	8727900699678	8727900699685	8727900390742	51
13818CP	Festoon T6,2x27	Standard	24	3	SV6	48464228	8711500484642	8711500484659	8727900391251	52
13821B2	R5W	Standard	24	5	BA15s	40453430	8711500404534	-	8711500405425	50
13821LCP	R5W	Standard	24	5	BA15s	48338673	8711500483386	8711500483393	8711500483409	50
13821MDCP	R5W	MasterDuty	24	5	BA15s	69955528	8727900699555	8727900699562	8727900390766	50
13821MLCP	R5W	MasterLife	24	5	BA15s	69970828	8727900699708	8727900699715	8727900390773	50
13822CP	R5W	Standard	24	5	BA15d	40904128	8711500409041	8711500878021	8711500790491	50
13829CP	BA7	Standard	24	3	BA7s	52133628	8711559521336	8711500401274	8727900390759	50
13844B2	C5W	Standard	24	5	SV8,5	40463330	8711500404633	-	8711500405388	52
13844CP	C5W	Standard	24	5	SV8,5	48197973	8711500481979	8711500481986	8711500481993	52
13848CP	Festoon T6,2x35	Standard	24	3	SV6	48470328	8711500484703	8711500484710	8727900391268	52
13850CP	Festoon T15x43	Standard	24	15	SV8,5	48288428	8711500482884	8711500482891	8727900391244	53
13854CP	Festoon T10,5x38 10W	Standard	24	10	SV8,5	48251828	8711500482518	8711500482525	8727900391206	52
13864CP	Festoon T10,5x43 5W	Standard	24	5	SV8,5	48233428	8711500482334	8711500482341	8727900391213	52
13866CP	Festoon T10,5x43 10W	Standard	24	10	SV8,5	48245728	8711500482457	8711500482464	8727900391220	53
13910CP	T3W	Standard	24	3	BA9s	21955828	8711500219558	8711500219565	8711500220851	51
13913CP	T2W	Standard	24	2	BA9s	22003528	8711500220035	8711500220042	8711500220844	51
13929B2	T4W	Standard	24	4	BA9s	40454130	8711500404541	-	8711500405432	51
13929CP	T4W	Standard	24	4	BA9s	21985573	8711500219855	8711500219862	8711500219879	51
13929MDCP	T4W	MasterDuty	24	4	BA9s	69958628	8727900699586	8727900699593	8727900391039	51
13929MLCP	T4W	MasterLife	24	4	BA9s	69976028	8727900699760	8727900699777	8727900391046	51
13960CP	W2,5W	Standard	24	2.5	W2,1x9,5d	48147428	8711500481474	8711500481481	8727900391275	52
13961B2	W5W	Standard	24	5	W2,1x9,5d	52420730	8711559524207	-	8711559524214	52
13961CP	W5W	Standard	24	5	W2,1x9,5d	48138273	8711500481382	8711500481399	8711559530376	52
13972MDB1	H7	MasterDuty	24	70	PX26d	82589630	8711500825896	-	8711500825902	49
13972MDBVB1	H7	MasterDuty BlueVision	24	70	PX26d	53279130	8727900532791	-	8727900532807	49
13972MDBVS2	H7	MasterDuty BlueVision	24	70	PX26d	53277728	8727900532777	-	8727900532784	49
13972MDC1	H7	MasterDuty	24	70	PX26d	82581060	8711500825810	8711500828514	8711500825827	49
13972MLC1	H7	MasterLife	24	70	PX26d	82573530	8711500825735	-	8727900371147	49
13974CP	WBT5	Standard	24	2	W2x4,6d	48318828	8711500483188	8711500483195	8727900391183	52
24029CP	Bax 8,5d/2 yellow	Standard	24	1.2	B8,5d/2	48402428	8711500484024	8711500484031	8727900391190	53
24032CP	Bax 8,5d brown	Standard	24	1.2	B8,5d	48852728	8711500488527	8711500488534	8727900391077	53
24356CP	H21W	Standard	24	21	BAY9s	87615728	8711500876157	8711500876164	8727900371161	51
24362MDC1	H11	MasterDuty	24	70	PGJ19-2	82583430	8711500825834	-	8727900371055	49
24362MLC1	H11	MasterLife	24	70	PGJ19-2	82575930	8711500825759	-	8727900371062	49

## Halogen Kits

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
<b>12V Spare kits</b>										
55472EKKM	H1	Easy Kit	12	-	-	69551928	8727900695519	-	8727900695533	56
55473EKKM	H4	Easy Kit	12	-	-	69555728	8727900695557	-	8727900695571	56
55474EKKM	H7	Easy Kit	12	-	-	69558828	8727900695588	-	8727900695601	56
55475EKKM	H1/H7	Easy Kit	12	-	-	69562528	8727900695625	-	8727900695656	56
55717EBKM	H1	Essential Box	12	-	-	70032928	8727900700329	-	8727900700336	57
55718EBKM	H4	Essential Box	12	-	-	70034328	8727900700343	-	8727900700350	57
55719EBKM	H7	Essential Box	12	-	-	70036728	8727900700367	-	8727900700374	57
55720EBKM	H1/H7	Essential Box	12	-	-	70038128	8727900700381	-	8727900700398	57
<b>24V Spare kits</b>										
55554SKMDKM	MiniKit H4	MasterDuty	24	-	-	69586130	8727900695861	-	8727900695885	58
55555SKMDKM	MiniKit H7	MasterDuty	24	-	-	69590830	8727900695908	-	8727900695939	58
55559LKMDKM	MaxiKit H4	MasterDuty	24	-	-	69684494	8727900696844	-	8727900696851	58
55560LKMDKM	MaxiKit H7	MasterDuty	24	-	-	69686894	8727900696868	-	8727900696875	58
55561LKMDKM	MaxiKit H1/H7	MasterDuty	24	-	-	69688294	8727900696882	-	8727900696899	58
<b>Headlight restoration kit</b>										
HRK00XM	-	-	-	-	-	39976931	8727900399769	-	8727900399776	59

## Xenon lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
12410C1	D5S	Vision	12	25	PK32d-7	36981633	8727900369816	-	8727900369823	70
12410XV+C1	D5S	X-tremeVision gen2	12/24	25	PK32d-7	35392133	8727900353921	-	87190180005090	70
12411C1	D8S	Vision	42	25	PK32d-1	00467333	8719018004673	-	8719018004680	70
42306VIC1	D3R	Vision	42	35	PK32d-6	36483533	8727900364835	-	8727900364842	70
42402VIC1	D4S	Vision	42	35	P32d-5	36485933	8727900364859	-	8727900364866	70
42402XV2C1	D4S	X-tremeVision gen2	42	35	P32d-5	37721733	8727900377217	-	8727900377224	70

## Xenon lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
42402XV2S1	D4S	X-tremeVision gen2	42	35	P32d-5	37719433	8727900377194	-	8727900377200	70
42403VIC1	D3S	Vision	42	35	PK32d-5	36481133	8727900364811	-	8727900364828	70
42403VIS1	D3S	Vision	42	35	PK32d-5	36495833	8727900364958	-	8727900364965	70
42403WHV2C1	D3S	WhiteVision gen2	42	35	PK32d-5	37737833	8727900377378	-	8727900377385	70
42403WHV2S1	D3S	WhiteVision gen2	42	35	PK32d-5	37735433	8727900377354	-	8727900377361	70
42403XV2C1	D3S	X-tremeVision gen2	42	35	PK32d-5	37717033	8727900377170	-	8727900377187	70
42403XV2S1	D3S	X-tremeVision gen2	42	35	PK32d-5	37713233	8727900377132	-	8727900377149	70
42406VIC1	D4R	Vision	42	35	P32d-6	36487333	8727900364873	-	8727900364880	70
85122SYC1	D2S	LongerLife	85	35	P32d-2	37518333	8727900375183	-	8727900375190	69
Ordering codes for Germany, Austria, Switzerland, Netherlands										
85122SYC1	D2S	LongerLife	85	35	P32d-2	37244133	8727900372441	-	8727900372458	69
Ordering codes for Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom										
85122SYC1	D2S	LongerLife	85	35	P32d-2	37524433	8727900375244	-	8727900375251	69
Ordering codes for Central Europe (Poland, Romania, Czech Republic) and other East European countries										
85122SYS1	D2S	LongerLife	85	35	P32d-2	37254033	8727900372540	-	8727900372557	69
Ordering codes for Germany, Austria, Switzerland, Netherlands, Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom										
85122VIC1	D2S	Vision	85	35	P32d-2	36477433	8727900364774	-	8727900364781	68
85122VIS1	D2S	Vision	85	35	P32d-2	36491033	8727900364910	-	8727900364927	68
85122WHV2C1	D2S	WhiteVision gen2	85	35	P32d-2	37729333	8727900377293	-	8727900377309	69
85122WHV2S1	D2S	WhiteVision gen2	85	35	P32d-2	37727933	8727900377279	-	8727900377286	69
85122XV2C1	D2S	X-tremeVision gen2	85	35	P32d-2	37707133	8727900377071	-	8727900377088	68
85122XV2S1	D2S	X-tremeVision gen2	85	35	P32d-2	37703333	8727900377033	-	8727900377040	68
85126SYC1	D2R	LongerLife	85	35	P32d-3	37520633	8727900375206	-	8727900375213	69
Ordering codes for Germany, Austria, Switzerland, Netherlands										
85126SYC1	D2R	LongerLife	85	35	P32d-3	37252633	8727900372526	-	8727900372533	69
Ordering codes for Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom										
85126SYC1	D2R	LongerLife	85	35	P32d-3	37526833	8727900375268	-	8727900375275	69
Ordering codes for Central Europe (Poland, Romania, Czech Republic) and other East European countries										
85126SYS1	D2R	LongerLife	85	35	P32d-3	37248933	8727900372489	-	8727900372496	69
Ordering codes for Germany, Austria, Switzerland, Netherlands										
85126VIC1	D2R	Vision	85	35	P32d-3	36479833	8727900364798	-	8727900364804	69
85126VIS1	D2R	Vision	85	35	P32d-3	36493433	8727900364934	-	8727900364941	69
85126WHV2C1	D2R	WhiteVision gen2	85	35	P32d-3	37733033	8727900377330	-	8727900377347	69
85126WHV2S1	D2R	WhiteVision gen2	85	35	P32d-3	37731633	8727900377316	-	8727900377323	69
85126XV2C1	D2R	X-tremeVision gen2	85	35	P32d-3	37711833	8727900377118	-	8727900377125	69
85126XV2S1	D2R	X-tremeVision gen2	85	35	P32d-3	37709533	8727900377095	-	8727900377101	69
85409VIC1	D1R	Vision	85	35	PK32d-3	36475033	8727900364750	-	8727900364767	68
85415SYC1	D1S	LongerLife	85	35	PK32d-2	37516933	8727900375169	-	8727900375176	68
Ordering codes for Germany, Austria, Switzerland, Netherlands										
85415SYC1	D1S	LongerLife	85	35	PK32d-2	37250233	8727900372502	-	8727900372519	68
Ordering codes for Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom										
85415SYC1	D1S	LongerLife	85	35	PK32d-2	37522033	8727900375220	-	8727900375237	68
Ordering codes for Central Europe (Poland, Romania, Czech Republic) and other East European countries										
85415SYS1	D1S	LongerLife	85	35	PK32d-2	37246533	8727900372465	-	8727900372472	68
Ordering codes for Germany, Austria, Switzerland, Netherlands, Scandinavia (Sweden, Norway, Finland, Denmark), United Kingdom										
85415VIC1	D1S	Vision	85	35	PK32d-2	36473633	8727900364736	-	8727900364743	68
85415VIS1	D1S	Vision	85	35	PK32d-2	36489733	8727900364897	-	8727900364903	68
85415WHV2C1	D1S	WhiteVision gen2	85	35	PK32d-2	37725533	8727900377255	-	8727900377262	68
85415WHV2S1	D1S	WhiteVision gen2	85	35	PK32d-2	36072133	8727900360721	-	8727900377248	68
85415XV2C1	D1S	X-tremeVision gen2	85	35	PK32d-2	37701933	8727900377019	-	8727900377026	68
85415XV2S1	D1S	X-tremeVision gen2	85	35	PK32d-2	37697533	8727900376975	-	8727900376982	68

## LED lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
11005U50CW2	HL [=HB3/HB4]	U50	12/24	16	P20d/P22d	00786531	8719018007865	-	8719018007872	90
11005U90CW2	HL [=HB3/HB4]	U90	12/24	20,0	P20d/P22d	00722331	8719018007223	-	8719018007230	90
11005UE2X2	HL [=HB3/HB4]	UE	12/24	24	P20d/P22d	00324931	8719018003249	-	8719018003256	90
11012U50CW2	HL [=HIR2]	U50	12/24	16	PX22D	00788931	8719018007889	-	8719018007896	89
11012U90CW2	HL [=HIR2]	U90	12/24	20,0	PX22D	00724731	8719018007247	-	8719018007254	89
11012UE2X2	HL [=HIR2]	UE	12/24	24	PX22D	00326331	8719018003263	-	8719018003270	90
11065AU60X2	SL-AMBER [=W21W]	U60	12	2,3	WX3x16d	01558730	8719018015587	-	8719018015594	94
11065CU60X2	SL-WHITE [=W21W]	U60	12	2,3	W3x16d	01554930	8719018015549	-	8719018015556	94
11065RU60X2	SL-RED [=W21W]	U60	12	2,3	W3x16d	01564830	8719018015648	-	8719018015655	94
11065U30CWB2	SL-WHITE [=W21W]	U30	12	1,75	W3x16d	00684430	8719018006844	-	8719018006851	94
11065U30RB2	SL-RED [=W21W]	U30	12	1,75	W3x16d	00686830	8719018006868	-	8719018006875	94
11066AU60X2	SL-AMBER [=W21/5W]	U60	12	2,5/0,5	W3x16q	01556330	8719018015563	-	8719018015570	93
11066CU60X2	SL-WHITE [=W21/5W]	U60	12	2,5/0,5	W3x16q	01550130	8719018015501	-	8719018015518	94
11066RU60X2	SL-RED [=W21/5W]	U60	12	2,5/0,5	W3x16q	01552530	8719018015525	-	8719018015532	93
11066U30RB2	SL-RED [=W21/5W]	U30	12	0,8/1,75	W3x16q	00642430	8719018006424	-	8719018006431	94
11067CU60X1	SL-T16 [=W16W]	U60	12	2,4	W2,1x9,5d	01566230	8719018015662	-	8719018015679	93

## LED lighting

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
11258U50CWX2	HL [≈H1]	U50	12/24	15	P14,5s	00778031	8719018007780	-	8719018007797	88
11258U90CWX2	HL [≈H1]	U90	12/24	18,0	P14,5s	00714831	8719018007148	-	8719018007155	88
11258UE2X2	HL [≈H1]	UE	12/24	19	P14,5s	00330031	8719018003300	-	8719018003317	88
11336U50CWX2	HL [≈H3]	U50	12/24	15	PK22s	00790231	8719018007902	-	8719018007919	88
11336U90CWX2	HL [≈H3]	U90	12/24	18	PK22s	00726131	8719018007261	-	8719018007278	88
11336UE2X2	HL [≈H3]	UE	12/24	19	PK22s	00332431	8719018003324	-	8719018003331	88
11342U50CWX2	HL [≈H4]	U50	12/24	15	P43t-38	00782731	8719018007827	-	8719018007834	88
11342U90CWX2	HL [≈H4]	U90	12/24	18	P43t-38	00718631	8719018007186	-	8719018007193	88
11342UE2X2	HL [≈H4]	UE	12/24	21	P43t-38	00318831	8719018003188	-	8719018003195	88
11362U50CWX2	HL [≈H11]	U50	12/24	15	PGJ19-2	00780331	8719018007803	-	8719018007810	85
11362U90CWX2	HL [≈H11]	U90	12/24	18	PGJ19-2	00716231	8719018007162	-	8719018007179	85
11362UE2X2	HL [≈H11]	UE	12/24	24	PGJ19-2	00328731	8719018003287	-	8719018003294	85
11366U50CWX2	FL [≈H8/H11/H16]	U50	12/24	12	PGJ19-1/2/3	00776631	8719018007766	-	8719018007773	85
11366U90CWX2	FL [≈H8/H11/H16]	U90	12/24	15	PGJ19-1/2/3	00712431	8719018007124	-	8719018007131	85
11366UE2X2	FL [≈H8/H11/H16]	UE	12/24	24	PGJ19-1/2/3	00322531	8719018003225	-	8719018003232	85
11498AU60X2	SL-AMBER [≈P21W]	U60	12	2,3	BAU15S	01548830	8719018015488	-	8719018015495	93
11498CU60X2	SL-WHITE [≈P21W]	U60	12	2,3	BA15S	01540230	8719018015402	-	8719018015419	93
11498RU60X2	SL-RED [≈P21W]	U60	12	2,3	BA15S	01542630	8719018015426	-	8719018015433	93
11498U30CWB2	SL-WHITE [≈P21W]	U30	12	1,75	BA15S	00680630	8719018006806	-	8719018006813	93
11498U30RB2	SL-RED [≈P21W]	U30	12	1,75	BA15S	00640030	8719018006400	-	8719018006417	93
11499AU60X2	SL-AMBER [≈P21/5W]	U60	12	2,5/0,5	BAY15d	01546430	8719018015464	-	8719018015471	92
11499CU60X2	SL-WHITE [≈P21/5W]	U60	12	2,5/0,5	BAY15d	01544030	8719018015440	-	8719018015457	93
11499RU60X2	SL-RED [≈P21/5W]	U60	12	2,5/0,5	BAY15d	01538930	8719018015389	-	8719018015396	92
11499U30RB2	SL-RED [≈P21/5W]	U30	12	0,8/1,75	BAY15D	00682030	8719018006820	-	8719018006837	93
11854CU60X1	SL-FEST 38mm 6000K	U60	12	1	SV8,5	01532730	8719018015327	-	8719018015334	92
11854U30CWB1	SL-FEST 38mm 6000K	U30	12	0,6	SV8,5	00676930	8719018006769	-	8719018006776	92
11854WU60X1	SL-FEST 38mm 4000K	U60	12	1	SV8,5	01526630	8719018015266	-	8719018015273	92
11860CU60X1	SL-FEST 30mm 6000K	U60	12	1	SV8,5	01530330	8719018015303	-	8719018015310	92
11860U30CWB1	SL-FEST 30mm 6000K	U30	12	0,6	SV8,5	00674530	8719018006745	-	8719018006752	92
11860WU60X1	SL-FEST 30mm 4000K	U60	12	1	SV8,5	01524230	8719018015242	-	8719018015259	92
11864U30CWB1	SL-FEST 43mm 6000K	U30	12	0,6	SV8,5	00678330	8719018006783	-	8719018006790	92
11866CU60X1	SL-FEST 43mm 6000K	U60	12	1	SV8,5	01534130	8719018015341	-	8719018015358	92
11866WU60X1	SL-FEST 43mm 4000K	U60	12	1	SV8,5	01528030	8719018015280	-	8719018015297	92
11961AU60X2	SL-AMBER [≈W5W]	U60	12	0,5	W2,1x9,5d	01560030	8719018015600	-	8719018015617	94
11961CU60X2	SL-T10 [≈W5W] 6000K	U60	12	0,9	W21x9,5d	01516730	8719018015167	-	8719018015174	95
11961U30CWB2	SL-T10 [≈W5W] 6000K	U30	12	0,6	W21x9,5d	00694330	8719018006943	-	8719018006950	95
11961WU60X2	SL-T10 [≈W5W] 4000K	U60	12	0,9	W21x9,5d	01514330	8719018015143	-	8719018015150	95
11961XU60X2	SL-T10 [≈W5W] 8000K	U60	12	0,7	W21x9,5d	01522830	8719018015228	-	8719018015235	95
11972U50CWX2	HL [≈H7]	U50	12/24	15	PX26d	00784131	8719018007841	-	8719018007858	85
11972U90CWX2	HL [≈H7]	U90	12/24	18	PX26d	00720931	8719018007209	-	8719018007216	88
11972UE2X2	HL [≈H7]	UE	12/24	20	PX26d	00320131	8719018003201	-	8719018003218	85
24805CU60X2	SL-WHITE [≈R5W/R10W]	U60	12/24	1	BA15s	01562430	8719018015624	-	8719018015631	99
24844CU60X1	SL-FEST 30mm 6000K	U60	24	1,5	SV8,5	01536530	8719018015365	-	8719018015372	99
24961CU60X2	SL-T10 [≈W5W] 6000K	U60	24	1	W2,1x9,5d	01520430	8719018015204	-	8719018015211	99
24961WU60X2	SL-T10 [≈W5W] 4000K	U60	24	1	W2,1x9,5d	01518130	8719018015181	-	8719018015198	99

## LED CANbus

Ordering number	Type	Range	V	W	Base	GOC	EAN1	EAN2	EAN3	Page
12956X2	CANbus adapter for LED 5W	-	12	5	-	39722294	8727900397222	-	8719018005007	96
18957X2	CANbus adapter for LED 21W	-	12	21	-	39587794	8727900395877	-	8719018004956	96
18960C2	CANbus adapter for HL [≈H4]	-	12	10	-	39809094	8727900398090	-	8719018004963	96
18952C2	CANbus adapter for HL [≈H7]	-	12	10	-	05064994	8719018050649	-	8719018004994	96
18954C2	CANbus adapter for FL [≈H8/H11/H16]	-	12	10	-	05066394	8719018050663	-	8719018004970	96
18956C2	CANbus adapter for HL [≈HB3/HB4/HIR2]	-	12	10	-	05068794	8719018050687	-	8719018004987	96
18961C2	Light Repair for HL [≈H7]	-	12	10	-	00281594	8719018002815	-	8719018002822	96



2022 © Lumileds Holding B.V. All rights reserved.

The Philips trademark and the Philips shield emblem are registered trademarks of Koninklijke Philips N.V. Specifications are subject to change without notice.

[philips.com/automotive](https://philips.com/automotive)