



Philips
SoundStage speaker

3.1 CH Integrated subwoofer

Bluetooth® and NFC
HDMI ARC
150 W



HTL5130B

Powerful sound to enhance your TV

with integrated subwoofer

Philips SoundStage speaker HTL5130B features WaveFlector technology that produces a wide, natural and immersive sound for the greatest movie and music enjoyment. Simply connect it to your TV for all-round home entertainment.

Richer sound for watching TV and movies

- Dolby Digital for ultimate movie experience
- Dedicated centre-channel speaker for superior voice clarity
- Integrated subwoofer for powerful bass
- WaveFlector immerses you in every sound detail

Connect and enjoy all your entertainment

- One-touch with NFC-enabled smartphones for Bluetooth pairing
- Bluetooth wireless music streaming from your music devices
- EasyLink to control all HDMI CEC devices via a single remote
- Enjoy MP3/WMA music directly from your portable USB devices
- Audio-in to enjoy music from iPod/iPhone/MP3 player
- HDMI ARC to access all the sound from your TV


Designed for simplicity

- Modern design to complement your home environment
- Perfect match with your TV, just place it on top

PHILIPS


Highlights

Dolby Digital

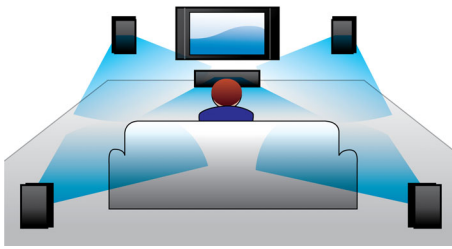

Because Dolby Digital standards, the world's leading digital multi-channel audio standards, make use of the way the human ear naturally processes sound, you experience superb quality surround sound audio with realistic spatial cues.

WaveFlector

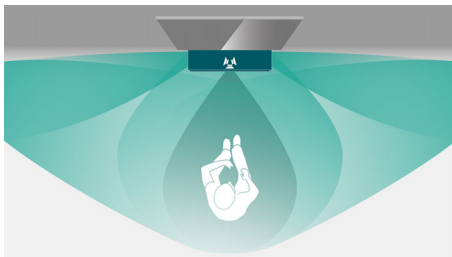

The basis of WaveFlector technology is a unique speaker system with three speakers, two side speakers and one centre speaker, located between two reflectors. The two side speakers are fired into extensively researched, calculated and defined reflectors so that sound, especially high frequencies, are reflected out into the room to the listener. Angling speakers into the reflector creates a wide and natural soundscape that actually exceeds the spatial effect offered by a standard stereo home cinema setup.

Integrated subwoofer



An integrated subwoofer gives the SoundStage the power it needs to boost TV bass without

taking up any additional space. It also features a wide range of Dynamic Bass enhancements that improve the impact of bass in a film or music. By integrating the subwoofer, the SoundStage provides bass without the mess of an external unit.

One-touch with NFC




Pair Bluetooth® devices easily with one-touch NFC (Near Field Communications) technology. Just tap the NFC-enabled smartphone or tablet on the NFC area of a soundstage to turn the soundstage on, start Bluetooth® pairing, and begin streaming music.

Bluetooth wireless streaming

Bluetooth wireless music streaming from your music devices

Perfect match with your TV

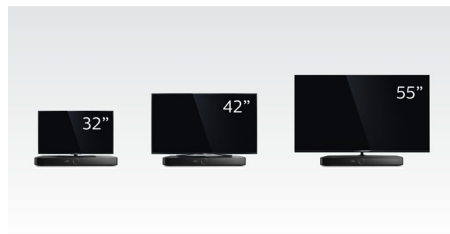

The SoundStage features a sturdy, elegant frame designed to support the weight of a range of TVs, from 32" up to 55".

EasyLink



EasyLink lets you control multiple devices like DVD players, Blu-ray players, TVs etc. with one remote. It uses HDMI CEC industry-standard protocol to share functionality between devices through the HDMI cable. With one touch of a button, you can operate all your connected HDMI CEC-enabled equipment simultaneously. Functions like standby and play can now be carried out with absolute ease.

USB



Enjoy MP3/WMA music directly from your portable USB devices

Audio in



Audio in allows you to easily play your music directly from your iPod/iPhone/iPad, MP3 player or laptop via a simple connection to your Philips home cinema system. Simply connect your audio device to the Audio in jack to enjoy your music with the superior sound quality of the Philips home cinema system.

Specifications

Sound

- Sound Enhancement: Night Mode, Treble and Bass Control, Audio sync
- Sound System: Dolby Digital, Dolby pro-logic 2
- Speaker output power: 3 x 30 W
- Subwoofer output power: 60 W
- Total Power RMS @ 10% THD: 150 W

Loudspeakers

- Loudspeaker types: Integrated with main unit
- Drivers per main unit: 3 x 2" full range drivers
- Speaker Impedance: 4 ohm
- Subwoofer type: 1 x 4" woofer, Integrated Subwoofer

Connectivity

- Integrated Connections: Bluetooth, NFC
- iPod/iPhone: via 3.5 mm Audio In, via Bluetooth
- Rear Connections: HDMI 1.4 output (ARC), Digital coaxial in, Digital optical in, AUX in, Audio-in 3.5-mm jack
- Front/Side connections: Audio in, USB

Convenience

- EasyLink (HDMI-CEC): Automatic audio input mapping, One touch play, One touch standby, Remote Control-Passthrough, System standby, Audio Return Channel
- HDMI Features: Audio Return Channel (ARC), Content Type

Power

- Power supply: 110-240V, 50/60 Hz
- Power consumption: 50 W
- Standby power consumption: < 0.5 W

Dimensions

- Main Unit (W x H x D): 713 x 75 x 325 mm
- Main Unit Weight: 4.5 kg
- Packaging (W x H x D): 790 x 138 x 396 mm
- Weight incl. Packaging: 8.1 kg

Accessories

- Included accessories: Power cord, Quick start guide, Remote Control, Safety and Legal Leaflet, Trademarks Sheet, AAA Battery (x1), User Manual

Audio Playback

- Compression format: MP3, WMA

Outer Carton

- EAN: 48 95185 60807 5
- Gross weight: 13.545 lb
- Outer carton (L x W x H): 31.1 x 15.6 x 5.4 inch
- Net weight: 10.750 lb
- Number of consumer packages: 1
- Tare weight: 2.795 lb

Packaging dimensions

- Packaging dimensions (W x H x D): 31.1 x 5.4 x 15.6 inch
- EAN: 48 95185 60807 5
- Gross weight: 13.545 lb
- Net weight: 10.750 lb
- Number of products included: 1
- Packaging type: Carton
- Tare weight: 2.795 lb
- Type of shelf placement: Laying

Product dimensions

- Product dimensions (W x H x D): 28.1 x 3.0 x 12.8 inch
- Weight: 9.921 lb



Issue date 2015-06-11

Version: 2.1.4

12 NC: 8670 001 24192
EAN: 04 89518 56080 75

© 2015 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com