

PHILIPS

Xenon lighting



Car lighting

Xenon product range

Our **pro-active solution** against xenon lamp piracy

COA: Certificate of authenticity

Counterfeit Philips xenon lamps are becoming increasingly available through online and offline distribution channels.

These counterfeit lamps are poor imitations of inferior quality. Buying, selling or being in possession of counterfeit products is illegal.



To protect our customers and all consumers from counterfeit Philips lighting products, we've created a pro-active solution using unique, state-of-the-art technology.

Philips Certificate of Authenticity (COA) is available on every new xenon lamp package you order.

Using the Security code, as well as other special security elements, professionals can verify the authenticity of the Philips product on a dedicated, fully secure internet platform. Professionals can either scan the QR code or go to **www.philips.com/original**.

Always ensure that you are buying genuine Philips products.



How does it work?

Visual verification

1 The security code is unique. It is different on every xenon product.

2 The iridescent security code shimmers in rainbow colors under a strong light.

3 The COA label is equipped with a moving single-digit code. Its vertical movement is visible when tilted under a strong light. It repeats the last digit of the security code.

Online verification

4 The ultimate verification process may be done rapidly online in just a few clicks. Using your mobile, your tablet or your computer, connect to **www.philips.com/original** and follow the simple instructions:

1/ Type in the unique security code.


2/ Type in the label ID number.

Retype the code again to make sure it's been entered correctly. Additional rejection of code entry may indicate this product is counterfeit.

A **xenon lamp** is much more than just a lamp.

A xenon lighting system is composed of:

- **Xenon HID**
High Intensity discharge lamp
- **Complex optical system**
with automatic level control and power-wash system
- **Electronic ballast and high-voltage starter**

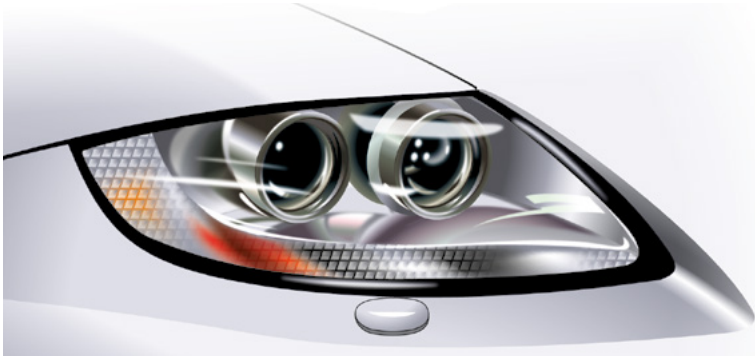

- Brilliant and powerful light projection
- Light color and intensity close to daylight
- Extra-long lifetime
- Low power consumption

Replacing xenon lamps in 4 steps:

1

Preparation

- Switch off the lights
- Take out the fuse
- Disconnect the battery

2

Disconnection and removal

- Take off the cover
- Take out the old lamp

3

Replacement and reconnection

- Put back the lamp
- Always select the same lamp as that indicated in the car maintenance booklet (or the application guide).

4

Check

Make sure that the lamp is correctly installed before:

- Putting back the cover
- Reconnecting the battery
- Check that the lights operate correctly

Which **xenon** lamp do you need?



Experience more light

Ideal for replacement



Xenon Vision

Standard



Xenon Vision



Beam performance



Light color

Up to **4300 K**



Standard: 4150 K


Available in
D1S, D1R, D2S, D2R, D3S,
D3R, D4S, D4R, D5S

Up to **150%**
more vision*



Xenon X-tremeVision gen2

Standard

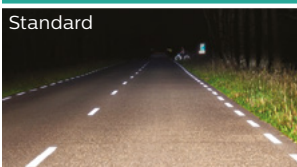

Xenon X-tremeVision gen2



Beam performance



Light color

Up to **4800 K**



Standard: 4150 K

Available in
D1S, D2S, D2R, D3S, D4S

Light that lasts

Peace of mind
4 + 3 years
warranty




Xenon LongerLife**



4 years
warranty
+3

Beam performance



Lifetime

Up to **7 years**



Available in
D1S, D2S, D2R

Enjoy your passion

Homogeneous
white
LED effect



Xenon WhiteVision gen2

Standard



Xenon WhiteVision gen2



Beam performance



Light color

Up to **5000 K**



Standard: 4150 K

Available in
D1S, D2S, D2R, D3S

Images for illustration purposes only

* Compared to the minimum legal standard (except for D2R that provides up to 20% more vision)

** Not available in all countries, please contact your sales representative

Xenon Vision

Ideal for replacement

Philips Xenon Vision allows you to replace a single burned-out lamp while matching the color of the unchanged one. The Xenon Vision innovative replacement technology is the ideal economical solution for a single-lamp replacement.



- **Single-lamp replacement technology:**
new lamp matches color temperature of the unchanged one
- **Ideal economical solution for a single-lamp replacement**
- **Homologated 4 300 K**

Standard



Xenon Vision





Xenon X-tremeVision gen2

Experience more light

Philips Xenon X-tremeVision gen2 is the latest development in **Xenon technology**. It offers the **most powerful** beam with light emission pushed to the limit. This means outstanding light performance with a unique light setting for **optimal driving comfort**.

- Optimal light performance
- Up to 150% more vision*
- Maximum safety and visibility
- Designed for demanding drivers



Standard



Xenon X-tremeVision gen2



www.philips.com/xenongen2

*Compared to the minimum legal standard (except for D2R that provides up to 20% more vision).

Xenon LongerLife

Peace of mind with the longest guarantee

Equip your car with Philips Xenon LongerLife lamps and you can drive up to 7 years without the worry of lamp failures. Philips Xenon LongerLife lamps automatically come with a **4-year warranty**. Register your purchase online and you can extend this warranty by an **extra 3 years**.



4 years
warranty
+3

3 years extra warranty for free in 3 simple steps

Register online at www.philips.com/xenonwarranty, within 30 days of purchase.

- 1** First, confirm you have a genuine product by checking the warranty COA code on the certificate of authenticity sticker.
- 2** Fill in your personal details, product, point of purchase and provide proof of purchase.
- 3** Finally, print and keep your 7-year warranty certificate together with your proof of purchase.

You can now drive worry-free
for 7 years.



Xenon WhiteVision gen2

Ultimate white LED effect

Philips Xenon WhiteVision gen2 lamps create an intense white look of your car and produce brighter, homogeneous white light on the road. It is the perfect choice if you wish to mix and match xenon and LED lighting on your car.

- Intense homogeneous bright white light
- Perfect match with LED lighting on your car
- Up to 5 000 K white light on the road
- Up to 120% more vision*
- 100% road legal



www.philips.com/xenongen2

* Compared to the minimum legal standard (except for D2R that provides up to 20% more vision).

D1S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415VIS1	85	35	PK32d-2	36489733	8 727900 364897	-	8727900364903	R99	2
85415VIC1	85	35	PK32d-2	36473633	8 727900 364736	-	8727900364743	R99	2

D1S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415XV2S1	85	35	PK32d-2	37697533	8 727900 376975	-	8727900376982	R99	2
85415XV2C1	85	35	PK32d-2	37701933	8 727900 377019	-	8727900377026	R99	2

D1S LongerLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415SYS1	85	35	PK32d-2	37246533	8 727900 372465	-	8727900372472	R103	2
85415SYC1	85	35	PK32d-2	37250233	8 727900 372502	-	8727900372519	R100	2

D1S WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85415WHV2S1	85	35	PK32d-2	36072133	8 727900 360721	-	8727900377248	R99	2
85415WHV2C1	85	35	PK32d-2	37725533	8 727900 377255	-	8727900377262	R99	2

D1R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85409VIC1	85	35	PK32d-3	36475033	8 727900 364750	-	8727900364767	R99	2

D2S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122VIS1	85	35	P32d-2	36491033	8 727900 364910	-	8727900364927	R99	2
85122VIC1	85	35	P32d-2	36477433	8 727900 364774	-	8727900364781	R99	2

D2S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122XV2S1	85	35	P32d-2	37703333	8 727900 377033	-	8727900377040	R99	2
85122XV2C1	85	35	P32d-2	37707133	8 727900 377071	-	8727900377088	R99	2

D2S LongerLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122SYS1	85	35	P32d-2	37254033	8 727900 372540	-	8727900372557	R104	2
85122SYC1	85	35	P32d-2	37244133	8 727900 372441	-	8727900372458	R101	2

D2S WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85122WHV2S1	85	35	P32d-2	37727933	8 727900 377279	-	8727900377286	R99	2
85122WHV2C1	85	35	P32d-2	37729333	8 727900 377293	-	8727900377309	R99	2

D2R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126VIS1	85	35	P32d-3	36493433	8 727900 364934	-	8727900364941	R99	2
85126VIC1	85	35	P32d-3	36479833	8 727900 364798	-	8727900364804	R99	2

D2R X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126XV2S1	85	35	P32d-3	37709533	8 727900 377095	-	8727900377101	R99	2
85126XV2C1	85	35	P32d-3	37711833	8 727900 377118	-	8727900377125	R99	2

D2R LongerLife



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126SYS1	85	35	P32d-3	37248933	8 727900 372489	-	8727900372496	R105	2
85126SYC1	85	35	P32d-3	37252633	8 727900 372526	-	8727900372533	R102	2

D2R WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
85126WHV2S1	85	35	P32d-3	37731633	8 727900 377316	-	8727900377323	R99	2
85126WHV2C1	85	35	P32d-3	37733033	8 727900 377330	-	8727900377347	R99	2

D3S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42403VIS1	42	35	PK32d-5	36495833	8 727900 364958	-	8727900364965	R99	2
42403VIC1	42	35	PK32d-5	36481133	8 727900 364811	-	8727900364828	R99	2

D3S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42403XV2S1	42	35	PK32d-5	37713233	8 727900 377132	-	8727900377149	R99	2
42403XV2C1	42	35	PK32d-5	37717033	8 727900 377170	-	8727900377187	R99	2

D3S WhiteVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42403WHV2S1	42	35	PK32d-5	37735433	8 727900 377354	-	8727900377361	R99	2
42403WHV2C1	42	35	PK32d-5	37737833	8 727900 377378	-	8727900377385	R99	2

D3R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42306VIC1	42	35	PK32d-6	36483533	8 727900 364835	-	8727900364842	R99	2

D4S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42402VIC1	42	35	P32d-5	36485933	8 727900 364859	-	8727900364866	R99	2

D4S X-tremeVision gen2



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42402XV2S1	42	35	P32d-5	37719433	8 727900 377194	-	8727900377200	R99	2
42402XV2C1	42	35	P32d-5	37721733	8 727900 377217	-	8727900377224	R99	2

D4R Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
42406VIC1	42	35	P32d-6	36487333	8 727900 364873	-	8727900364880	R99	2

D5S Vision



Ordering number	V	W	Base	GOC	EAN1	EAN2	EAN3	ECE	Packing quantity
12410C1	12	25	PK32d-7	36981633	8 727900 369816	-	8727900369823	R99	2

